



---

# **GR712 Development Board**

---

**User Manual**

---

---

**COBHAM GAISLER AB**  
Rev. 0.13, 2018-03-08



Information furnished by Cobham Gaisler AB is believed to be accurate and reliable. However, no responsibility is assumed by Cobham Gaisler AB for its use, nor for any infringements of patents or other rights of third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of Cobham Gaisler AB.

---

Cobham Gaisler AB                    tel +46 31 7758650  
Kungsgatan 12                      fax +46 31 421407  
411 19 Göteborg                    sales@gaisler.com  
Sweden                                www.gaisler.com

---

Copyright © 2018 Cobham Gaisler

All information is provided as is. There is no warranty that it is correct or suitable for any purpose, neither implicit nor explicit.



---

## TABLE OF CONTENTS

<b>1</b>	<b>INTRODUCTION.....</b>	<b>7</b>
1.1	Overview.....	7
1.2	References.....	8
1.3	Handling.....	9
1.4	Abbreviations.....	9
<b>2</b>	<b>ELECTRICAL DESIGN.....</b>	<b>10</b>
2.1	GR712RC ASIC.....	10
2.2	Block Diagram.....	11
2.3	Memory.....	11
2.3.1	SRAM.....	12
2.3.2	FLASH.....	12
2.3.3	SDRAM.....	12
2.3.4	Expansion Connector.....	13
2.4	Switch Matrix for I/O.....	13
2.5	CAN Interface.....	16
2.5.1	Configuration of Bus Termination.....	16
2.5.2	Configuration of Slew Rate.....	17
2.6	Spacewire (LVDS) Interfaces.....	17
2.6.1	SPW interface circuit.....	17
2.6.2	SPWCLK.....	18
2.7	RS422 Interfaces for UART and TMTC functions.....	19
2.7.1	RS422 Transmitter Circuits.....	20
2.7.2	RS422 Receiver Circuits.....	20
2.8	UART's.....	21
2.9	ASCS16.....	21
2.10	SLINK.....	22
2.11	TMTC.....	22
2.12	Serial Interface (RS232).....	24
2.13	Debug Support Unit (DSU) Serial Interface.....	24
2.14	Oscillators and Clock Inputs.....	25
2.14.1	Main Clock.....	25
2.14.2	SPW_CLK.....	25
2.14.3	Ethernet Clock.....	25
2.14.4	MIL-STD-1553 Interface Clock.....	25
2.15	Power Supply and Voltage Regulation.....	26
2.16	Ethernet Interface.....	26
2.17	MIL-STD-1553 Interface.....	27
2.18	Other Interfaces and Circuits.....	28
2.18.1	GPIO.....	28
2.18.2	Reset Circuit and Button.....	28
2.18.3	Watchdog.....	28
2.18.4	JTAG interface.....	29
2.18.5	I2C interface.....	29
2.18.6	SPI interface.....	29
<b>3</b>	<b>SETTING UP AND USING THE BOARD.....</b>	<b>31</b>
<b>4</b>	<b>INTERFACES AND CONFIGURATION.....</b>	<b>36</b>
4.1	List of Front/Back Panel Connectors.....	36

4.2	List of Oscillators, Switches and LED's.....	48
4.3	List of Jumpers.....	49

---

## LIST OF TABLES

Table 2-1: SpaceWire Clock Divisor Resistors.....	18
Table 2-2: List of UART Signals.....	20
Table 2-3: List of ASCS16 Signals.....	20
Table 2-4: List of SLINK Signals.....	21
Table 2-5: List of TMTC Signals.....	21
Table 3-1: Default Status of Jumpers/Switches.....	29
Table 4-1: List of Connectors.....	34
Table 4-2: J1A (upper connector) UART-0 - Serial Interface (RS232) connections .....	35
Table 4-3: J1B (lower connector) UART-1 - Serial Interface (RS232) connections .....	35
Table 4-4: J2A (upper connector) CANBUS-1 interface connections.....	35
Table 4-5: J2B (lower connector) CANBUS-0 interface connections.....	36
Table 4-6: J3 SPW-0 interface connections .....	36
Table 4-7: J4 SPW-1 interface connections.....	36
Table 4-8: J5 SPW-2 interface connections .....	37
Table 4-9: J6 SPW-3 interface connections.....	37
Table 4-10: J7 SPW-4 interface connections .....	37
Table 4-11: J8 SPW-5 interface connections.....	38
Table 4-12: Expansion connector J9 Pin-out.....	39
Table 4-13: J10 RJ45-ETHERNET Connector.....	40
Table 4-14: Expansion connector J11 Pin-out.....	40
Table 4-15: J12 ASIC– JTAG Connector .....	41
Table 4-16: J13 Dual MIL-STD-1553 interface connections.....	41
Table 4-17: J14 POWER – External Power Connector.....	41
Table 4-18: SODIMM socket J15 Pin-out.....	42
Table 4-19: J16 RS422 Transmitter Pairs.....	43
Table 4-20: J17 RS422 Transmitter Pairs.....	43
Table 4-21: J18 RS422 Receiver Pairs.....	43
Table 4-22: J19 RS422 Receiver Pairs.....	43
Table 4-23: J20 RS422 Receiver Pairs.....	44
Table 4-24: J21 PIO Header Pin out.....	44
Table 4-25: J22 PIO Header Pin out.....	44
Table 4-26: J23 PIO Header Pin out.....	44
Table 4-27: J24 PIO Header Pin out.....	45
Table 4-28: J25 PIO Header Pin out.....	45
Table 4-29: J26 PIO Header Pin out.....	45
Table 4-30: J27 PIO Header Pin out.....	45
Table 4-31: J30 POWER – External Power Connector.....	46
Table 4-32: J31 SPW Clock.....	46
Table 4-33: List and definition of Oscillators.....	46
Table 4-34: List and definition of PCB mounted LED's.....	46
Table 4-35: List and definition of Switches.....	46
Table 4-36: List and definition of PCB Jumpers, part 1.....	47
Table 4-37: List and definition of PCB Jumpers, part 2.....	48
Table 4-38: List and definition of PCB Jumpers, part 3.....	49

## LIST OF FIGURES

Figure 1-1: GR712 Development Board.....	7
Figure 2-1: GR712RC ASIC Block Diagram.....	10
Figure 2-2: GR712RC ASIC.....	10
Figure 2-3: Block Diagram of GR712-BOARD.....	11
Figure 2-4: On-Board Memory Configuration.....	12
Figure 2-5: Mezzanine Connector Pin Number Ordering.....	13
Figure 2-6: Switch Matrix and Interface Functions .....	14
Figure 2-7: Configuration Jumpers.....	15
Figure 2-8: Block Diagram of the CAN interface.....	16
Figure 2-9: Transceiver and Termination Configuration (one of 2 interfaces shown).....	17
Figure 2-10: Transceiver and Termination of the SPW interfaces (2 of 6 interfaces shown).....	18
Figure 2-11: SPW Clock Divisor Configuration Resistors.....	19
Figure 2-12: RS422 TX configuration.....	20
Figure 2-13: RS422 Receiver Configuration.....	21
Figure 2-14: Serial interface.....	24
Figure 2-15: Debug Support Unit connections.....	24
Figure 2-16: Clock Distribution Scheme.....	25
Figure 2-17: Power Regulation Configuration.....	26
Figure 2-18: Block diagram of Ethernet RMII Interface.....	27
Figure 2-19: MIL-STD-1553 Transceiver and Transformer circuit .....	27
Figure 2-20: PIO interface configuration.....	28
Figure 2-21: Watchdog configuration.....	29
Figure 2-22: I2C Interface Configuration.....	30
Figure 2-23: SPI Interface Configuration.....	30
Figure 3-1: GRMON Listing - 1.....	33
Figure 3-2: GRMON Listing - 2.....	34
Figure 3-3: GRMON Listing - 3.....	35
Figure 4-1: PCB Assembly Top View.....	53
Figure 4-2: PCB Top Assembly View.....	52
Figure 4-3: PCB Connector Positions.....	53
Figure 4-4: GR712 Assembly Photo.....	54



## REVISION HISTORY

Revision	Date	Page	Description
0.1	2011-01-24		New document
0.2	2011-02-03	§2.13 §4.2 §3	Changed 'DSU-BREAK" switch to 'not used' Updated figures
0.3	2011-02-24	-	Various small edits
0.4	2011-03-29	30	Corrected GRMON command
0.5	2011-07-22	§2.6.2	Added additional text to describe setting SpW Clock Divisor Registers
0.6	2011-10-03	§2.13 Table 4-1 Table 4-15	Added mention of FT2232 chip for USB-JTAG Interface Corrected JTAG connector type for J12 / Mini-USB Corrected pin names for J12 / Mini-USB
0.7	2012-02-22	§2.3.3 §2.12, Table 4-36	Added note about maximum SDRAM clock speed Corrected references to jumper JP1 and its pinning.
0.7a	2012-02-23	Table 3-1	Correct defaults for JP1, JP2.
0.8	2013-01-21	§3	Removed '-i' option as not compatible with latest versions of grmon/grmon2.
0.9	2013-08-28	RD-5 & §2.3.4	Added reference document and information on expansion connector pin numbering Added clarification for jumper numbering/lettering
0.10	2013-10-23	Figure 2-6 Table 3-1 & 4-33	Corrected Jumper position labels for expansion connector pin numbering Correct typo: Default frequency is 48MHz.
0.11	2014-08-08	§1.3 Table 3-1	Removed spurious third paragraph Changed 'default' status of JP88 to 'not installed' since a separate 100MHz oscillator (X5) is installed for SPW_CLK Changed default state of JP84 to 2-3 to use 80MHz oscillator in X2.
0.12	2014-09-19	Fig 4-3	Corrected some dimensions in drawing
0.13	2018-03-08	Table 4-31	Corrected pin out for power connector J30



---

## 1 INTRODUCTION

### 1.1 Overview

This document describes the *GR712 Development Board*.

The purpose of this equipment is to provide developers with a convenient hardware platform for the evaluation and development of software for the *Cobham Gaisler GR712RC Dual Core Leon3FT SparcV8 Processor*. The *GR712RC* is a *LEON3FT Fault-Tolerant architecture* custom ASIC for Aerospace applications.

The *GR712-BOARD* comprises a custom designed PCB in a Double Eurocard format (233.5 x 160mm) making the board suitable for stand-alone bench top development, or suitable for mounting in a housing. The principle interfaces and functions are accessible on the front and back edges of the board.

The *GR712RC* chip incorporates an internal programmable switch matrix which means that the same input/output pin can be used for multiple functions. This board therefore has a large number of configuration features in order to be able to exercise and configure the functions of the device.

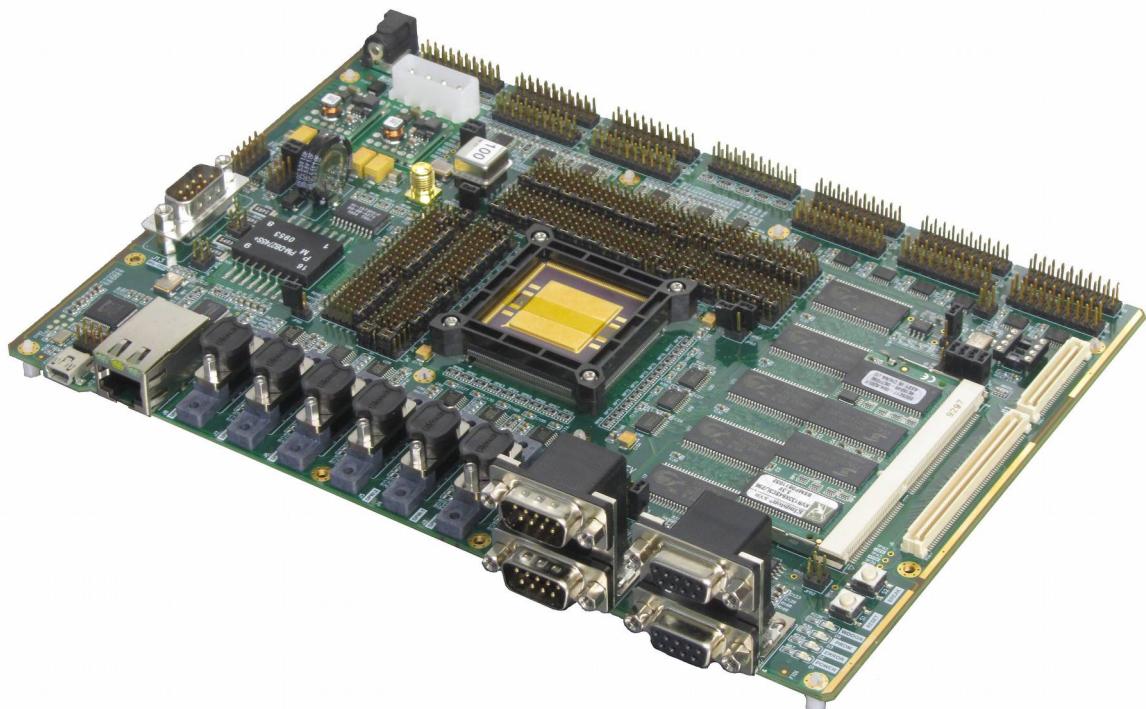


Figure 1-1: GR712 Development Board

The PCB contains the following main items as detailed in section 2 of this document:

- GR712RC ASIC
- Memory
  - SRAM 80 Mbit (1 bank x 2Mword x 40 bit, typ. 10ns)  
(optional second bank is not fitted as standard)
  - SDRAM SODIMM socket (up to 64Mword x 48 bit with 512Mbyte module)
  - FLASH 64Mbit (8M x 8 bit, typ. 90ns)
  - additional memory options possible via memory expansion connector
- Power, Reset, Clock and Auxiliary circuits
- Interface circuits required for the features listed below

The interface connectors on the Front edge of the board provide:

- Two Serial UART interface (RS232) with D9 Sub female connectors
- Ethernet, 10/100Mbit RMII interface with RJ45 jack
- JTAG – DSU interface
- Two CAN bus interfaces (ISO 11898) with D9 Sub male connectors
- Two dedicated Spacewire interfaces (MDM9S connectors)
- Four optional Spacewire interfaces (MDM9S connectors)

To enable convenient connection to the interfaces, the connector types and pin-outs are compatible with the standard connector types for these types of interfaces.

The interface connectors on the Back edge of the board provide:

- +5V input power connector
- 64 pins General Purpose I/O Port on 0.1" headers (some shared with other functions)
- 20 RS422 Transmit pairs, on 0.1" headers
- 28 RS422 Receive pairs, on 0.1" headers

Additionally, on-board headers and components provide access to the following functions/features:

- Dual MIL-STD-1553B communication interface
- I2C interface, with on-board Real-Time Clock, and user connections on 0.1" header
- SPI interface, with on-board Temperature measurement, and user connections on 0.1" header
- Large number of header and jumper connections for configuration of the board
- Push Button for *RESET*
- LED indicators for *POWER*, *ERRORN*, *WATCHDOG* and *PROM\_BUSY*

## 1.2 References

- RD-1 GR712-BOARD\_schematic.pdf, Schematic
- RD-2 GR712-BOARD\_assy\_drawing.pdf, Assembly Drawing
- RD-3 GR712RC Dual Core Leon3FT SparcV8 Processor, Datasheet
- RD-4 GR712RC Dual Core Leon3FT SparcV8 Processor, User Manual

---

RD-5 [GR-MEZZ Technical Note](#), Technical Note about Mezzanine connectors

## 1.3 Handling



### ATTENTION : OBSERVE PRECAUTIONS FOR HANDLING ELECTROSTATIC SENSITIVE DEVICES

This unit contains sensitive electronic components which can be damaged by Electrostatic Discharges (ESD). When handling or installing the unit observe appropriate precautions and ESD safe practices.

When not in use, store the unit in an electrostatic protective container or bag.

When configuring the jumpers on the board, or connecting/disconnecting cables, ensure that the unit is in an un-powered state.



**ATTENTION! To prevent damage to board, please ensure that the correct power supply and power supply polarity is used with the board.**

## 1.4 Abbreviations

ASIC	Application Specific Integrated Circuit.
DIL	Dual In-Line
ESD	Electro-Static Discharge
FT	Fault-Tolerant
GEO	Geostationary Earth Orbit
GPIO	General Purpose Input / Output
I/O	Input/Output
IP	Intellectual Property
LEO	Low Earth Orbit
LVDS	Low Voltage Digital Signalling
MUX	Multiplexer
PCB	Printed Circuit Board
RMII	Reduced Media Independent Interface
RS	Reed Solomon
SMD	Surface Mount Device
SPW	Spacewire
TMTC	Telemetry/Telecommand

## 2 ELECTRICAL DESIGN

### 2.1 GR712RC ASIC

The GR712RC ASIC is an advanced system on a chip, with advanced interface protocols, dedicated for high reliability Rad-Hard space, aeronautics and military applications. The GR712RC incorporates a dual core LEON3-FT SPARC V8 processor architecture and its internal block diagram is represented in Figure 2-1.

In order to reduce the number of pins required on the device, an internal programmable switch matrix allows the same pin to be used for difference interface functions.

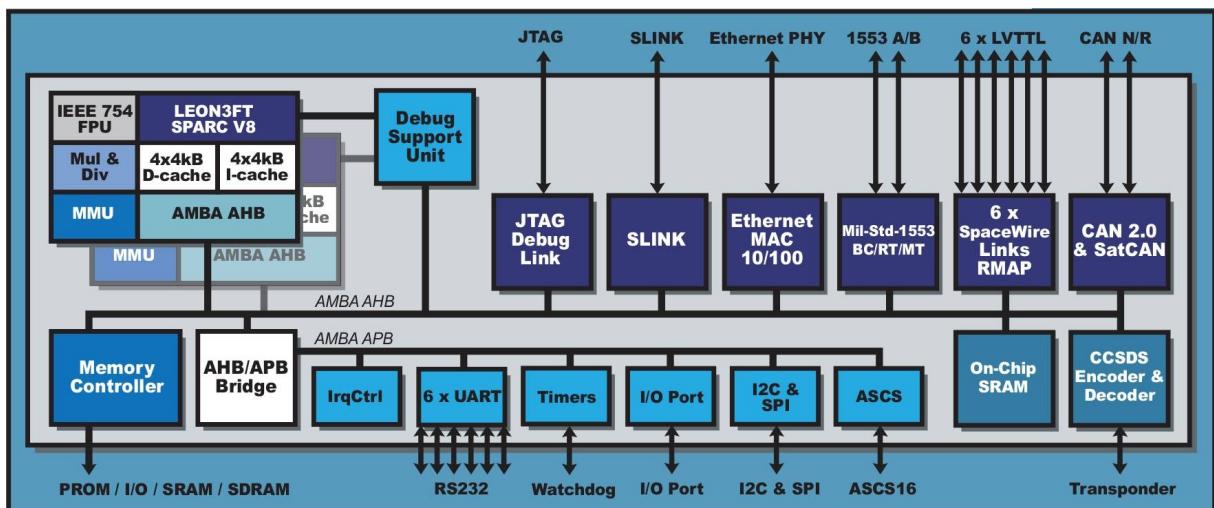


Figure 2-1: GR712RC ASIC Block Diagram

The GR712RC ASIC is packaged in a 240-pin, 0.5mm pitch Ceramic Quad Flatpack, and is soldered on to the PCB.

Details of the interfaces, operation and programming of the GR712RC ASIC is given in the *GR712 Datasheet*, RD-3, and *User Manual*, RD-4.



Figure 2-2: GR712RC ASIC

## 2.2 Block Diagram

The *GR712-BOARD* provides the electrical functions and interfaces as represented in the block diagram, Figure 2-3.

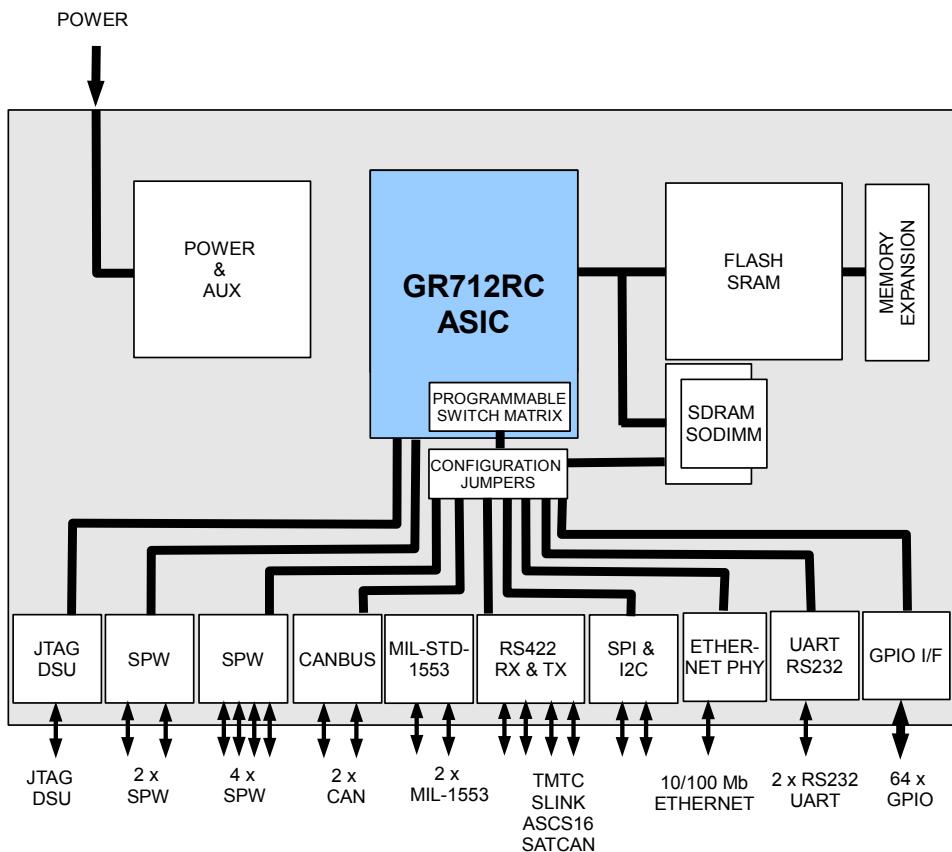


Figure 2-3: Block Diagram of GR712-BOARD

The Main PCB is of standard Double Eurocard format (233.35 x 160mm) and can be used 'stand-alone' on the bench-top simply using an external +5V power supply. The board is compatible with mounting in a 6U Compact PCI rack, if a suitable front panel is mounted.

## 2.3 Memory

The memory configuration installed on the board is shown in the figure below comprising of:

- 80Mbit of SRAM memory, organised as 1 bank x 2Mword x 40 bits wide  
(a second SRAM bank can be installed on the PCB, but is not fitted as standard)
- 64Mbit of Flash PROM, organised as 1 bank x 8 Mword x 8 bits wide)
- SODIMM socket to allow up to 64Mword x 48 bit SDRAM to be installed with 512Mbyte module

Additionally, in order to allow users to install alternative memory configurations or devices, all the signals of the memory interface are connected to memory expansion connectors. The expansion connectors allow mezzanine boards to be added similar to those developed for the existing *GR-CPCI* development boards.

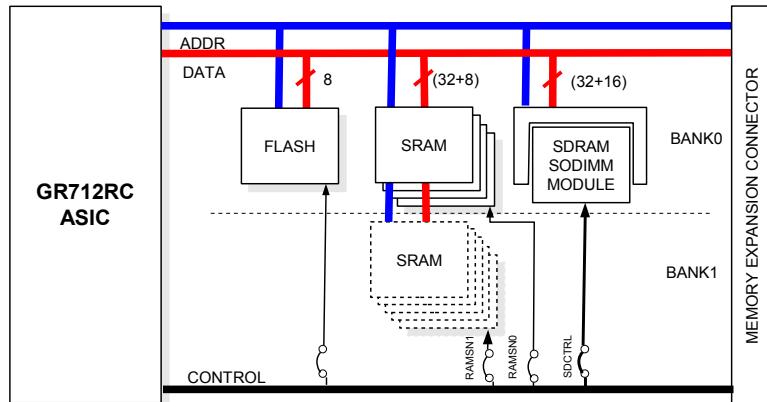


Figure 2-4: On-Board Memory Configuration

### 2.3.1 SRAM

The *GR712-BOARD* is laid out with two SRAM memory banks but only has one bank mounted as standard. Each bank is made up of five CY7C1069AV33. These devices are 16Mbit (2Mbyte x 8 bit) devices with 10 or 12 ns access times.

The five devices provide (32 + 8) bit wide SRAM memory paths allowing EDAC operation.

These memory banks are mapped as RAMBANK0 and RAMBANK1.

In case the user wishes to disable the on board memory, this can be done by removing the jumpers JP76 on the PCB.

### 2.3.2 FLASH

The *GR712-BOARD* has mounted as standard one FLASH memory bank, made up of one Intel JS28F640J3 FLASH device. This device is a 64Mbit (8Mbyte x 8 bit device), typically with 90ns access times. The data bus width to the Flash memory is 8 bits wide.

Note that, the PROM width and PROM EDAC conditions are set by the state of the GPIO[3] and GPIO[1] pins at power up of the Processor. These pins are provided with pull-down resistors to set the default mode to *8 bit* with *no EDAC*. If EDAC operation of the Flash Prom is desired, then jumper JP85 should be installed, to pull-up GPIO[1].

If measuring the state of the GPIO pins, please take into account the effect of these pull-down resistors. Conversely, if an external signal is connected to the GPIO[3] and GPIO[1] pins, this may override the expected state of the pin at power up.

For more information on the *PROM-width* and *PROM-EDAC* settings, refer to the Memory Configuration documentation in the GR712RC User Manual, RD-4.

### 2.3.3 SDRAM

Standard PC133 SDRAM can be installed by means of an 144 pin SO-DIMM socket on-board. The SO-DIMM provides 64 bit wide data paths. However, in the standard Leon model only 32 data bits of the SDRAM are used, plus 16 additional data bits for the RS/EDAC memory bits.

Therefore nominally only half the capacity of the SO-DIMM will be available.

Note: the SDRAM interface is limited to 80 MHz, and will not operate when the GR712RC is clocked at 96 MHz using the 2x48 MHz DLL mode. To operate the SDRAM, run the device at 48 MHz from X1, or at 80 MHz using the supplied 80 MHz oscillator in X2.

### 2.3.4 Expansion Connector

To make it feasible for users to define peripherals mapped in the processor I/O space and implement mezzanine boards which could be connected to this Development Board in a similar manner to the other GR Development Boards, the memory bus signals of the GR712 processor are connected to a 120 pin AMP connector (AMP 5-177984-5), J9 and 60 pin connector (AMP 5-177984-2), J11

Table 4-12 and Table 4-14 list the signals and their pin numbers for these connectors.

Figure 2-5 shows the pin numbering scheme as implemented on the expansion connector.

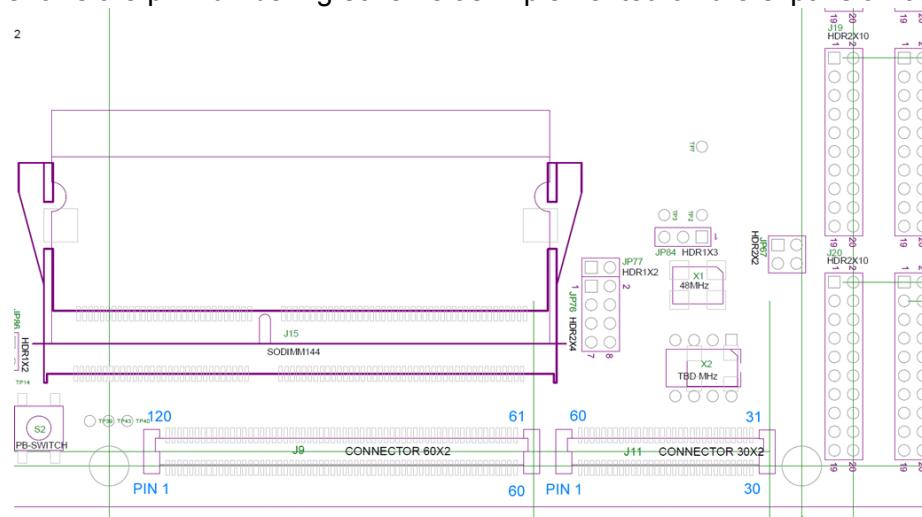


Figure 2-5: Mezzanine Connector Pin Number Ordering

Please note that this pin ordering does not match exactly the pin ordering which you will find on the Tyco part datasheets for the Mezzanine board mating connectors. The reason for this is explained in more detail in the Technical Note, RD-5.

Therefore please take care when designing your own mezzanine boards to take account of this pin ordering.

If there is any confusion, or you have any doubts, please do not hesitate to contact [info@pender.ch](mailto:info@pender.ch). Additional dimensional data or Gerber layout information can be provided, if required to aid in the layout of the User's mezzanine board.

## 2.4 Switch Matrix for I/O

The programmable switch matrix inside the GR712RC device allows the same pin to be used for different interface functions. Figure 2-6 shows the multiple interface functions which are assigned to the Switch Matrix I/O pins on the GR712RC device. Different interface types are grouped and highlighted by colour.

For the definition and explanation of the pin names, please refer to the Data Sheet for the GR712RC Device, RD-3.

JUMPER POS.:	'A' = 1-2	'B' = 3-4	'C' = 5-6	'D' = 7-8	'E' = 9-10	'F' = 11-12	
GPIO	CF0 GEO CPU	CF1 TM/TC	CF2 LEO CPU	CF3 INSTR CTL A	CF4 INSTR CTL B	U1B	
GPIO_0	UART_TX0	UART_TX0	UART_TX0	UART_TX0	UART_TX0	SWMX_00	4
GPIO_1	UART_RX0	UART_RX0	UART_RX0	UART_RX0	UART_RX0	SWMX_01	3
GPIO_2	UART_TX1	UART_TX1	UART_TX1	UART_TX1	UART_TX1	SWMX_02	2
GPIO_3	UART_RX1	UART_RX1	UART_RX1	UART_RX1	UART_RX1	SWMX_03	1
GPIO_4	UART_RX2	UART_RX2	UART_RX2	UART_RX2	UART_RX2	SWMX_04	240
GPIO_5	UART_RX3	UART_RX3	UART_RX3	UART_RX3	UART_RX3	SWMX_05	239
GPIO_6	UART_RX4	TMDO	UART_RX4	UART_RX4	UART_RX4	SWMX_06	238
GPIO_7	UART_RX4	TMCLKI	UART_RX4	UART_RX4	UART_RX4	SWMX_07	233
GPIO_8	UART_RX5	TMCLKO	UART_RX5	UART_RX5	UART_RX5	SWMX_08	231
GPIO_9	SPWTXS_4	SDCSN[0]	SDCSN[0]	SDCSN[0]	SDCSN[0]	SWMX_09	230
GPIO_10	SPWTXD_4	SDCSN[1]	SDCSN[1]	SDCSN[1]	SDCSN[1]	SWMX_10	229
GPIO_11	SPWRXS_4	TCCLK0	A16DASA			SWMX_11	228
GPIO_12	SPWRXD_4	TCD0	A16DASB			SWMX_12	227
GPIO_13	SPWTXS_2	SPWTXS_2	CANTXA	CANTXA	SPWTXS_2	SWMX_13	226
GPIO_14	SPWTXD_2	SPWTXD_2	CANTXB	CANTXB	SPWTXD_2	SWMX_14	225
GPIO_15	SPWRXS_2	SPWRXS_2	CANRXA	CANRXA	SPWRXS_2	SWMX_15	220
GPIO_16	SPWRXD_2	SPWRXD_2	CANRXB	CANRXB	SPWRXD_2	SWMX_16	219
GPIO_17	SPWTXS_3	SPWTXS_3	SLSYNC	SLSYNC	SPWTXS_3	SWMX_17	218
GPIO_18	SPWTXD_3	SPWTXD_3	A16ETR		SPWTXD_3	SWMX_18	217
GPIO_19	SPWRXS_3	SPWRXS_3			SPWRXS_3	SWMX_19	203
GPIO_20	SPWRXD_3	SPWRXD_3			SPWRXD_3	SWMX_20	202
GPIO_21	SPWTXD_5	SDDQM[0]	SDDQM[0]	SDDQM[0]	SDDQM[0]	SWMX_21	201
GPIO_22	SPWTXS_5	SDDQM[1]	SDDQM[1]	SDDQM[1]	SDDQM[1]	SWMX_22	200
GPIO_23	SPWRXS_5	TCRFAVL0	STCNEX0	STCNEX0		SWMX_23	197
GPIO_24	SPWRXD_5	TCCLK1	STCNEX1	STCNEX1		SWMX_24	196
GPIO_25	1553RXENA		STCNCLK1M	STCNCLK1M	RMTXD0	SWMX_25	193
GPIO_26	1553TXA		STCNMRK1	STCNMRK1	RMTXD1	SWMX_26	192
GPIO_27	1553RXA	TCD1	STCNEX2	STCNEX2	RMRXD0	SWMX_27	191
GPIO_28	1553RXNA	TCACT1	STCNCLS1M	STCNCLS1M	RMRXD1	SWMX_28	190
GPIO_29	1553TXNA		STCNMRK2	STCNMRK2	RMTXEN	SWMX_29	189
GPIO_30	1553TXINHA		STCNMRK3	STCNMRK3		SWMX_30	188
GPIO_31	1553RXB	TCRFAVL1	STCNTOD1N	STCNTOD1N	RMCRSDV	SWMX_31	187
GPIO_32	1553RXNB	TCCLK2	STCNTOD2N	STCNTOD2N	RMINTN	SWMX_32	186
GPIO_33	1553RXENB				RMMMDIO	SWMX_33	184
GPIO_34	1553TXB		A16MCS		RMMDC	SWMX_34	183
GPIO_35	1553CLK	TCD2	A16HS		RMRFCLK	SWMX_35	182
GPIO_36		TCACT2	STCNPPS1N	STCNPPS1N		SWMX_36	181
GPIO_37	1553TXNBB		A16DCS			SWMX_37	180
GPIO_38	1553TXINHB		A16MAS			SWMX_38	177
GPIO_39		TCRFAVL2	STCNPPS2N	STCNPPS2N		SWMX_39	176
GPIO_40			STCNSYNC	STCNSYNC		SWMX_40	175
GPIO_41	SPICLK		SLO	SLO		SWMX_41	174
GPIO_42	SPIMOSI		SLCLK	SLCLK	SPICLK	SWMX_42	173
GPIO_43		TCCLK3			SPIMOSI	SWMX_43	172
GPIO_44		TCD3				SWMX_44	169
GPIO_45		SDCAS	SDCASN	SDCASN		SWMX_45	166
GPIO_46		SDRAS	SDRASN	SDRASN		SWMX_46	165
GPIO_47		TCACT3				SWMX_47	164
GPIO_48	SPIMISO	TCRFAVL3	SLI	SLI	SPIMISO	SWMX_48	163
GPIO_49		SDWEN	SDWEN	SDWEN		SWMX_49	162
GPIO_50		SDDQM[2]	SDDQM[2]	SDDQM[2]		SWMX_50	161
GPIO_51		SDDQM[3]	SDDQM[3]	SDDQM[3]		SWMX_51	160
GPIO_52		TCACT4				SWMX_52	157
GPIO_53		TCRFAVL4				SWMX_53	155
GPIO_54	I2CSDA	TCCLK4	I2CSDA	I2CSDA		SWMX_54	154
GPIO_55	I2CSCL	TCD4	I2CSCL	I2CSCL		SWMX_55	153
GPIO_56		CB[8]	CB[8]	CB[8]		SWMX_56	144
GPIO_57		CB[9]	CB[9]	CB[9]		SWMX_57	143
GPIO_58		CB[10]	CB[10]	CB[10]		SWMX_58	142
GPIO_59		CB[11]	CB[11]	CB[11]		SWMX_59	140
GPIO_60		CB[12]	CB[12]	CB[12]		SWMX_60	137
GPIO_61		CB[13]	CB[13]	CB[13]		SWMX_61	136
GPIO_62		CB[14]	CB[14]	CB[14]		SWMX_62	135
GPIO_63		CB[15]	CB[15]	CB[15]		SWMX_63	132

Figure 2-6: Switch Matrix and Interface Functions

As can be seen from Figure 2-6, five basic interface configurations are defined for the GR712RC device:

<b>CF0</b>	GEOCPU	Processor for GEO applications
<b>CF1</b>	TMTC	Processor for TMTC applications
<b>CF2</b>	LEOCPU	Processor for LEO applications
<b>CF3</b>	INSTR CTRL A	Instrument Controller, type A
<b>CF4</b>	INSTR CTRL B	Instrument Controller, type B

If not otherwise used, a pin can be defined as a standard general purpose I/O for user-defined use.

In order to be able to configure the *GR712-BOARD* to operate in all these configurations, each Switch Matrix pin on the GR712RC ASIC is connected to a 12 pin, 2mm pitch header as represented in Figure 2-7.

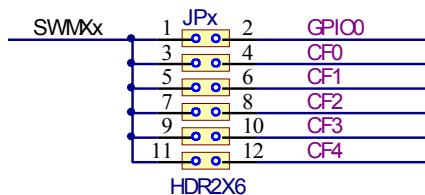


Figure 2-7: Configuration Jumpers

If the pin is to be used as a General Purpose I/O pin, the jumper would be inserted in the position 1-2. If the pin is to be used for configuration type CF0, the jumper would be inserted in the position 3-4, and so on.

Please note that on the silkscreen printing on the actual PCB, the jumper positions are marked with the letters 'A' to 'F' which correspond as follows:

- 'A' = 1-2
- 'B' = 3-4
- 'C' = 5-6
- 'D' = 7-8
- 'E' = 9-10
- 'F' = 11-12

In this simple manner the interface can be freely and flexibly configured, but the User must take care to ensure that the jumpers are set in the correct position to suit the interface functions they require.

## 2.5 CAN Interface

The board provides the electrical interfaces for two CAN bus interfaces, as represented in the block diagram, Figure 2-8.

The CAN bus transceiver IC's on this board are *SN65HVD230* devices from Texas Instruments which operate from a single +3.3V power supply.

The connector interfaces are male DSUB-9 connectors adhering to the standard pin-out for this type of interface (ref. Table 4-5 And Table 4-4).

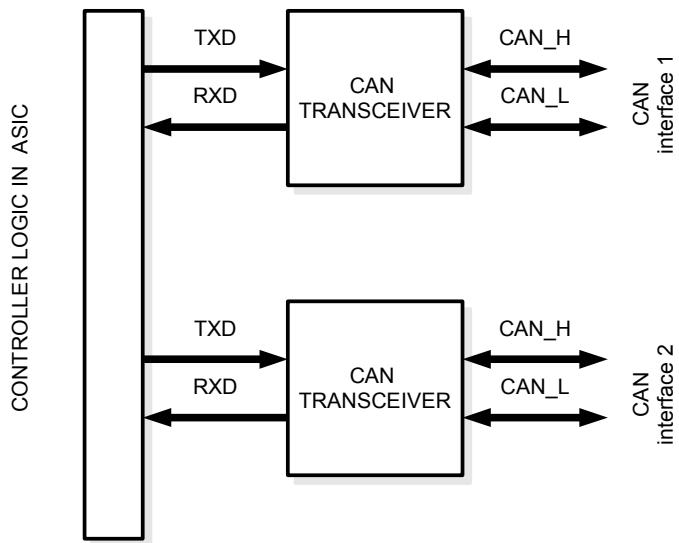


Figure 2-8: Block Diagram of the CAN interface

### 2.5.1 Configuration of Bus Termination

The CAN interfaces on the board can be configured for either end node or stub-node operation by means of the jumpers JP78 and JP79 for interface 1 and 2 respectively, as shown in Figure 2-9.

For normal end-node termination with a nominal 120 Ohm insert jumpers in position 1-3.

However, if a split termination is desired (if required for improved EMC performance), insert the jumpers in positions 1-2 and 3-4.

For stub nodes, if termination is not required, do not install any jumpers.

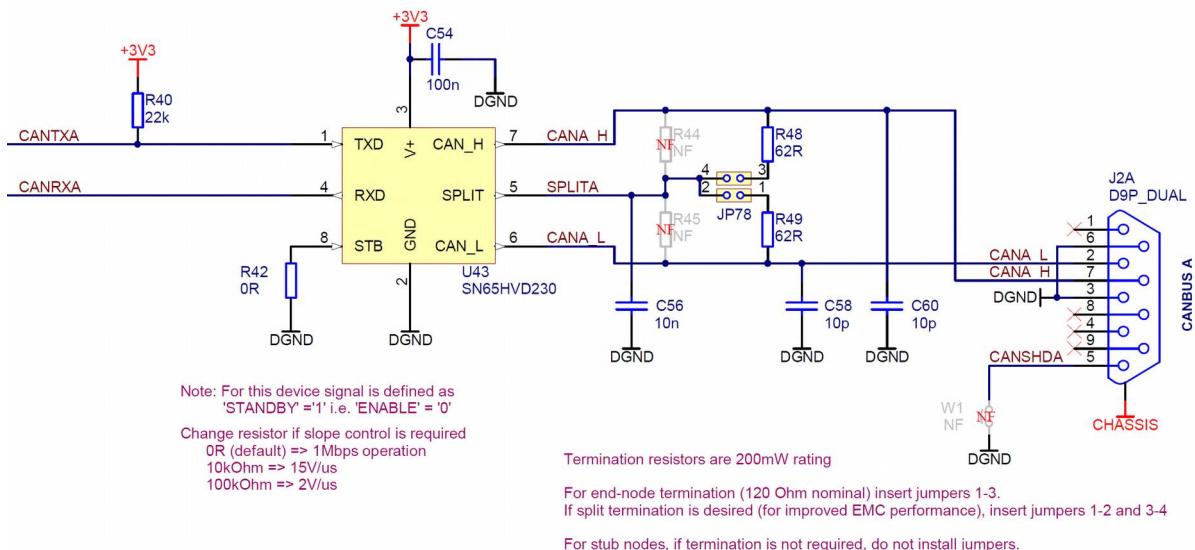


Figure 2-9: Transceiver and Termination Configuration (one of 2 interfaces shown)

### 2.5.2 Configuration of Slew Rate

The SN65HVD230 transceiver device used on the board has the facility to set the device into *STANDBY* mode, by connecting an active high external signal to pin 8 of the device. However, on this board this is tied to permanently '*low*' to enable the CAN bus Transceivers.

A further feature provided by the SN65HVD230 device is the capability to adjust the transceiver slew rate. This can be done by modifying the values of resistors connected to pin 8 of the transceivers.

The default value of 0 ohms is compatible with 1Mbps operation.

From the data sheet the following resistor values give the following slew rates:

10kOhm => 15V/us

100kOhm => 2V/us

## 2.6 Spacewire (LVDS) Interfaces

The GR712RC AS/C provides six Spacewire interfaces which are routed to connectors of the the board. Two interfaces *SPW-0* and *SPW-1* are dedicated Spacewire interfaces. The four remaining interfaces *SPW-2* – *SPW5* are available if the Switch matrix is suitably configured.

### 2.6.1 SPW interface circuit

Each Spacewire interface consists of 4 LVDS differential pairs (2 input pairs and 2 output pairs), as shown in the figure below. As the Spacewire interface to the GR712RC AS/C is LVTTL (3.3V logic), LVDS driver and receiver circuits are required on the PCB to interface between the ASIC and the external interface.

The PCB traces for the LVDS signals on the GR712-BOARD are laid out with 100-Ohm differential impedance design rules and matched trace lengths.

100 Ohm Termination resistors for the LVDS receiver signals are mounted on the board close to the receiver.

The pin out and connector types for these Spacewire interfaces conform to the Spacewire standard, as shown in Figure 2-10.

The inner shield pin (pin3 of the connector) is connected to DGND via a 10kohm resistor.

## 2.6.2 SPWCLK

Configuration options on the board (jumpers, crystal socket and SMA coaxial connector) allow this Spacewire clock to be provided from the following sources:

- Dedicated SPWCLK oscillator (if appropriate Oscillator X5 is mounted in socket and jumper JP88 is not installed)
- Main processor oscillator X1(if jumper JP88 is installed)
- External clock input via SMA connector J31. (X5 and JP88 not installed)

The default configuration is that the clock is supplied by the Main processor oscillator X1, and jumper JP88 is installed. Do not install jumper JP88 if an oscillator is installed in X5 socket as this will unintentionally connect the outputs of oscillator X1 and Oscillator X5 together.

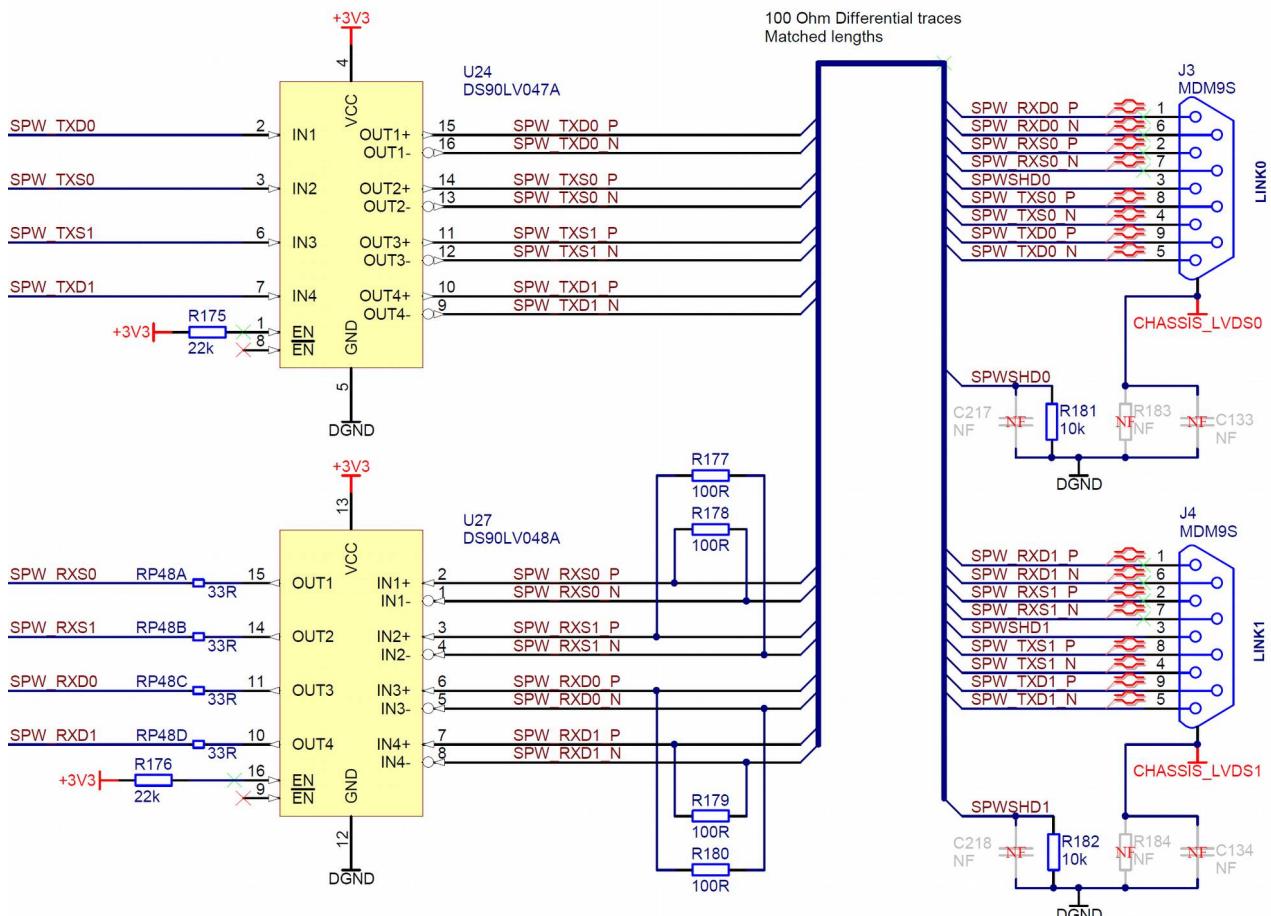


Figure 2-10: Transceiver and Termination of the SPW interfaces (2 of 6 interfaces shown)

At power-up or reset of the board, the SpaceWire Clock Divisor Registers values are cleared to zero, except the following bits which are taken from the GPIO inputs:

- bits 8 & 0 are set by the state of GPIO[34]
- bits 9 & 1 are set by the state of GPIO[37]
- bits 10 & 2 are set by the state of GPIO[40]
- bits 11 & 3 are set by the state of GPIO[42]

On the *GR712-BOARD* resistors can be installed in order to set these pins by means of either a pull-up (logic '1') or a pull-down (logic '0') resistor, as shown in the figure below.

The Pads for the Pull-down resistors are on the top side of the PCB, and the pads for the Pull-up resistors are on the bottom side of the PCB.

The default when delivered is that the pull-down resistors are mounted.

Note that, elsewhere on the board, each GPIO already has a weak pull-up (47kOhm) resistor, to ensure that the pins are not unintentionally left floating. The value of the pull-down resistor must be selected to be sufficiently strong to override the effect of this pull-up.

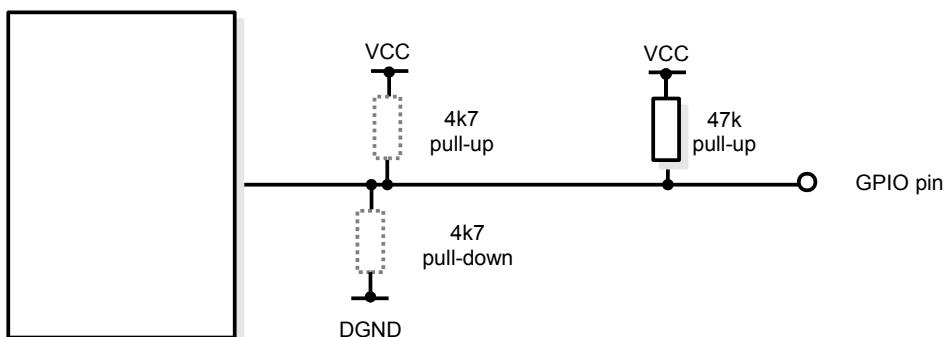


Figure 2-11: SPW Clock Divisor Configuration Resistors

GPIO Pin	ASIC pin name	Pull-down Resistor	Pull-up Resistor	Comment
GPIO[34]	SWMX37	R212	R221	R212 (4k7) is fitted as default
GPIO[37]	SWMX40	R211	R220	R211 (4k7) is fitted as default
GPIO[40]	SWMX43	R210	R219	R210 (4k7) is fitted as default
GPIO[42]	SWMX45	R209	R218	R209 (4k7) is fitted as default

Table 2-1: SpaceWire Clock Divisor Resistors

## 2.7 RS422 Interfaces for UART and TMTC functions

The GR712RC ASIC provides up to six UART interfaces, each with RXD/TXD pin pairs (3.3V TTL levels). For these interfaces RS422 transmitter/receiver have been defined.

Additionally, when defined for TMTC, ASCS16, SLNK and SATCAN functionality, RS422 signal levels are also required on a number of interfaces. The board therefore provides transmitter and receiver circuits for:

20 RS422 Transmitter Pairs

28 RS422 Receiver pairs

Since defining individual connector types for each combination of interfaces, while maintaining flexibility would lead to unmanageable complexity on the board, the RS422 signals are instead simply routed to a set of standard 0.1" pin headers.

If the connector type and pin-out interfaces is known, an appropriate wire harness can be easily defined to accommodate the desired connector types.

### 2.7.1 RS422 Transmitter Circuits

Each transmitter pair is connected to an 3.3V RS422 Transmitter circuit as shown in Figure 2-12

Some of the TMTC interface types require series 100 Ohm resistors for source-series termination of the interface. This can be provided on an individual basis for the transmitter pairs by means of series resistors installed on the board close to the transmitter circuits. If source-series termination is not required then zero-ohm resistors should be installed for the RS422 transmitter interfaces.

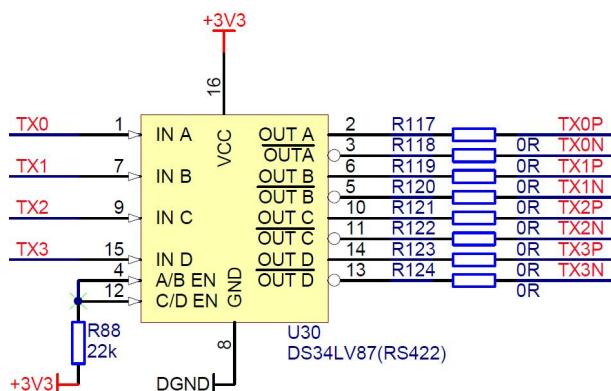


Figure 2-12: RS422 TX configuration

### 2.7.2 RS422 Receiver Circuits

Each receiver pair is connected to an 3.3V RS422 Receiver circuit as shown in Figure 2-13.

In the default configuration, none of the receiver pairs are provided with any form of termination. However, this can be added on an individual basis. Either an AC or simple resistive termination can be installed.

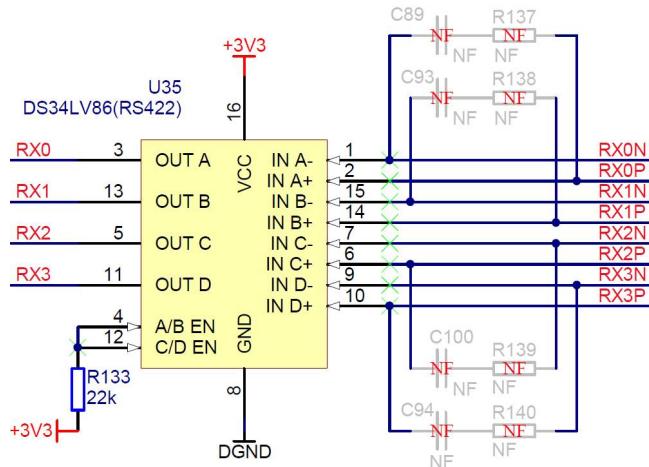


Figure 2-13: RS422 Receiver Configuration

## 2.8 UART's

The GR712RC ASIC incorporates a IP core which implement standard serial UART functionality. The interface to this core consists of the following as listed in Table 2-2.

These signals are defined to have RS422 voltage levels and 'share' connector pin as shown in the last column of the table

Name	Pin	Direction	Function	'Shares'
UARTTX0	4 / SWMX0	Out	Transmit 0	RS422_TX_0
UARTTX1	3 / SWMX2	Out	Transmit 1	RS422_TX_1
UARTTX2	2 / SWMX4	Out	Transmit 2	RS422_TX_2
UARTTX3	1 / SWMX6	Out	Transmit 3	RS422_TX_3
UARTTX4	240 / SWMX8	Out	Transmit 4	RS422_TX_4
UARTTX5	239 / SWMX10	Out	Transmit 5	RS422_TX_5
UARTRX0	238 / SWMX1	In	Receive 0	RS422_RX_0
UARTRX1	233 / SWMX3	In	Receive 1	RS422_RX_1
UARTRX2	232 / SWMX5	In	Receive 2	RS422_RX_2
UARTRX3	231 / SWMX7	In	Receive 3	RS422_RX_3
UARTRX4	230 / SWMX9	In	Receive 4	RS422_RX_4
UARTRX5	229 / SWMX11	In	Receive 5	RS422_RX_5

Table 2-2: List of UART Signals

## 2.9 ASCS16

The GR712RC ASIC incorporates a IP core which implements ASCS16 (STR) functionality. The interface to this core consists of the following as listed in Table 2-3.

These signals are defined to have RS422 voltage levels and 'share' connector pin as shown in the last column of the table

Name	Pin	Direction	Function	'Shares'
A16DASA	226 / SWMX14	In		RS422_RX_6
A16DASB	225 / SWMX15	In		RS422_RX_7
A16MCS	179 / SWMX36	Out		RS422_TX_8
A16HS	178 / SWMX37	Out		RS422_TX_9
A16DCS	175 / SWMX40	Out		RS422_TX_10
A16MAS	174 / SWMX41	Out		RS422_TX_11
A16ETR	202 / SWMX21	Out		RS422_TX_7

Table 2-3: List of ASCS16 Signals

## 2.10 SLINK

The GR712RC ASIC incorporates a IP core which implements SLINK (6MHz serial port) functionality. The interface to this core consists of the following as listed in Table 2-4.

These signals are defined to have RS422 voltage levels and 'share' connector pin as shown in the last column of the table

Name	Pin	Direction	Function	'Shares'
SLI	160 / SWMX51	In		RS422_RX_20
SLO	169 / SWMX44	Out		RS422_TX_12
SLSYNC	203 / SWMX20	Out		RS422_TX_6
SLCLK	166 / SWMX45	Out		RS422_TX_13

Table 2-4: List of SLINK Signals

## 2.11 TMTC

The GR712RC ASIC incorporates a IP core which implements TMTC functionality. The interface to this core consists of the following as listed in Table 2-5. These signals are defined to have RS422 voltage levels and 'share' connector pin as shown in the last column of the table.

Name	Pin	Direction	Function	'Shares'
TMDO	232 / SWMX8	Out		RS422_TX_4
TMCLKO	230 / SWMX10	Out		RS422_TX_5
TMCLKI	231 / SWMX9	In		RS422_RX_4
TCD0	225 / SWMX15	In		RS422_RX_7
TCD1	189 / SWMX30	In		RS422_RX_10
TCD2	177 / SWMX38	In		RS422_RX_14
TCD3	164 / SWMX47	In		RS422_RX_18
TCD4	142 / SWMX58	In		RS422_RX_24
TCCLK0	226 / SWMX14	In		RS422_RX_6
TCCLK1	192 / SWMX27	In		RS422_RX_9
TCCLK2	182 / SWMX35	In		RS422_RX_13
TCCLK3	165 / SWMX46	In		RS422_RX_17
TCCLK4	143 / SWMX57	In		RS422_RX_23
TCACT0	229 / SWMX11	In		RS422_RX_5
TCACT1	188 / SWMX31	In		RS422_RX_11
TCACT2	176 / SWMX39	In		RS422_RX_15
TCACT3	165 / SWMX46	In		RS422_RX_19
TCACT4	143 / SWMX57	In		RS422_RX_21
TCRFAVL0	193 / SWMX26	In		RS422_RX_8
TCRFAVL1	183 / SWMX34	In		RS422_RX_12
TCRFAVL2	173 / SWMX42	In		RS422_RX_16
TCRFAVL3	160 / SWMX51	In		RS422_RX_20
TCRFAVL4	144 / SWMX56	In		RS422_RX_22

Table 2-5: List of TMTC Signals

## 2.12 Serial Interface (RS232)

The *GR712-BOARD*, provides RS232 interface circuits and connectors for two Serial interfaces with TXD/RXD pins. This interface shares the TX0/RX0 and TX1/RX1 pin pairs with the RS422 interface, and therefore it is necessary to set jumpers JP1 and JP2 to select either RS422 (Install jumpers 1-3 and 2-4) or RS232 (jumpers 3-5 and 4-6) – Refer to Schematic, RD-1.

The front panel connector type for the UART interfaces is a Female D-Sub 9 pin type with a standard pin-out for serial links.

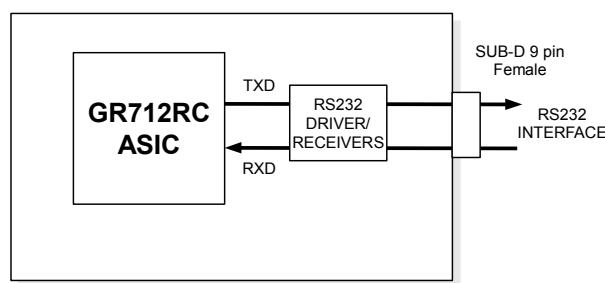


Figure 2-14: Serial interface

## 2.13 Debug Support Unit (DSU) Serial Interface

The *GR712-BOARD* provides a interface for Debug and control of the processor by means of a host terminal via the DSU JTAG link to the *GR712RC ASIC*, as represented in Figure 2-15. The connection to the board is via the Mini-USB connector J12, and the translation between USB and JTAG signals of the ASIC is performed via a FT2232H, Hi-Speed Dual USB UART/FIFO IC.

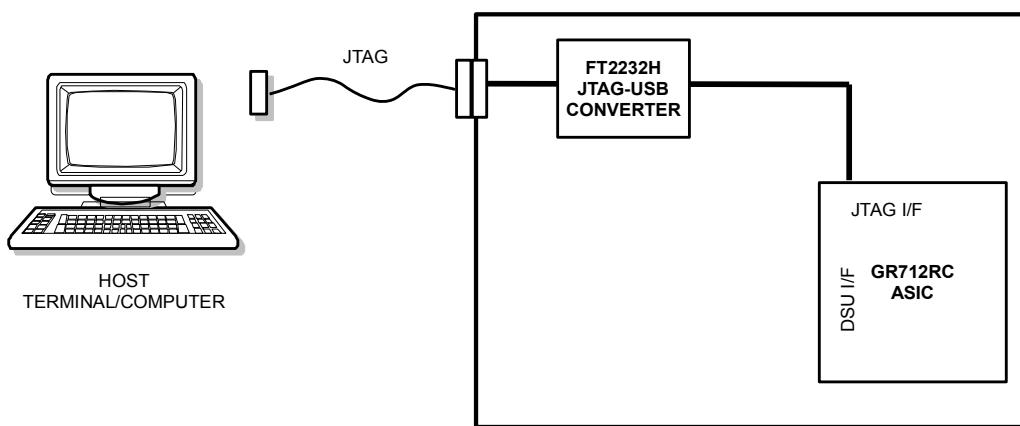


Figure 2-15: Debug Support Unit connections

On this chip there is no *DSUEN* signal so the DSU is always enabled to allow processor control and program debugging via the DSU link.

On this chip there is no *DSUACT* signal to indicate the DSU operation state.

On this chip there is no *DSUBREAK* signal.

## 2.14 Oscillators and Clock Inputs

The oscillator and clock scheme for the *GR712-BOARD* is shown in Figure 2-16.

### 2.14.1 Main Clock

The main oscillator for the *GR712RC ASIC* is a 48 MHz Crystal oscillator. This oscillator is an SMD oscillator soldered on to the board.

If a different user defined main operating frequency is required, this can be achieved by installing a 4 pin 3.3V/DIL8 style oscillator, in socket X2 on the board and moving jumper JP84.

A zero-delay buffer circuit (CY2305) is used to distribute the MAINCLK.

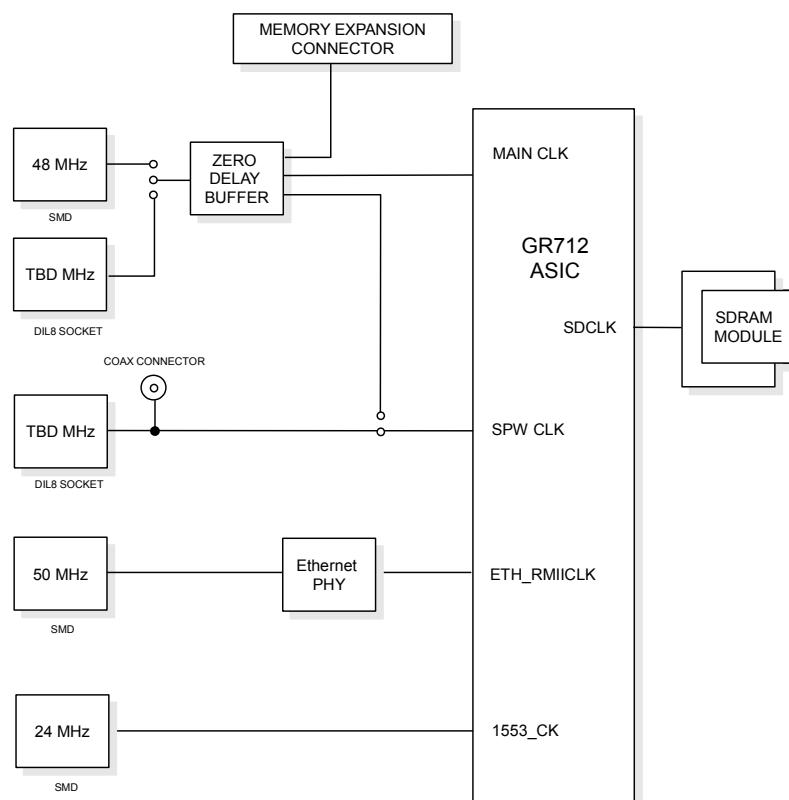


Figure 2-16: Clock Distribution Scheme

### 2.14.2 SPW\_CLK

The *SPWCLK* can be derived from either the *MAIN CLK*, a separate socketed on-board crystal oscillator, or can be injected on a SMA coaxial connector on the board.

### 2.14.3 Ethernet Clock

A dedicated 50MHz SMD oscillator is provided for the Ethernet Controller and PHY circuit (see section 2.16).

### 2.14.4 MIL-STD-1553 Interface Clock

A dedicated 24.0MHz SMD oscillator is provided for the MIL-STD-1553 interface logic in the ASIC.

## 2.15 Power Supply and Voltage Regulation

The board operates from a single +5V DC power supply input. On board regulators generate the following voltages:

- +3.3V for the GR712RC I/O voltage, memory chip and other peripherals
- +1.8V for GR712RC Vcore voltage

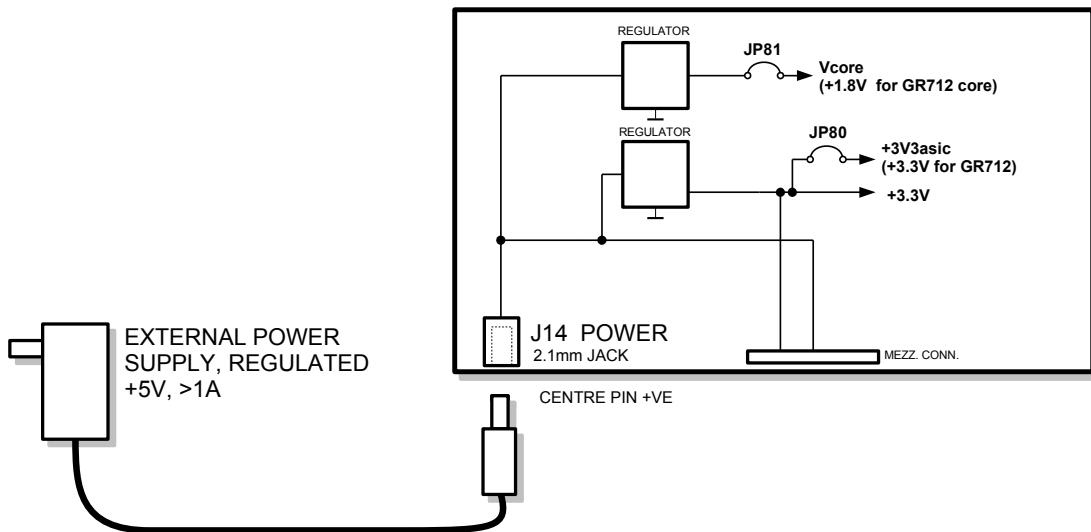


Figure 2-17: Power Regulation Configuration

Both the voltages +5V and +3.3V are provided to the memory expansion interface making feasible that user defined mezzanine boards can use these voltages.

The Jumpers JP80 and JP81 provide Current measurement points for monitoring and measurement of the current consumption of the GR712RC ASIC.

## 2.16 Ethernet Interface

The GR712RC ASIC device incorporates a Ethernet controller with support for RMII interface, and the GR712 Development Board has a National Semiconductor DP83848 10/100Mbit/s Ethernet PHY transceiver and RJ45 connector are on board.

For more information on the registers and functionality of the Ethernet MAC+PHY device please refer to the data sheet for the DP83848 device.

A 50 MHz oscillator dedicated for this device is provided on the board.

The interrupt output of the Ethernet MDIO interface is connected to the SWMX35 input to the GR712RC ASIC. This can be disabled by removing jumper JP35-e if necessary.

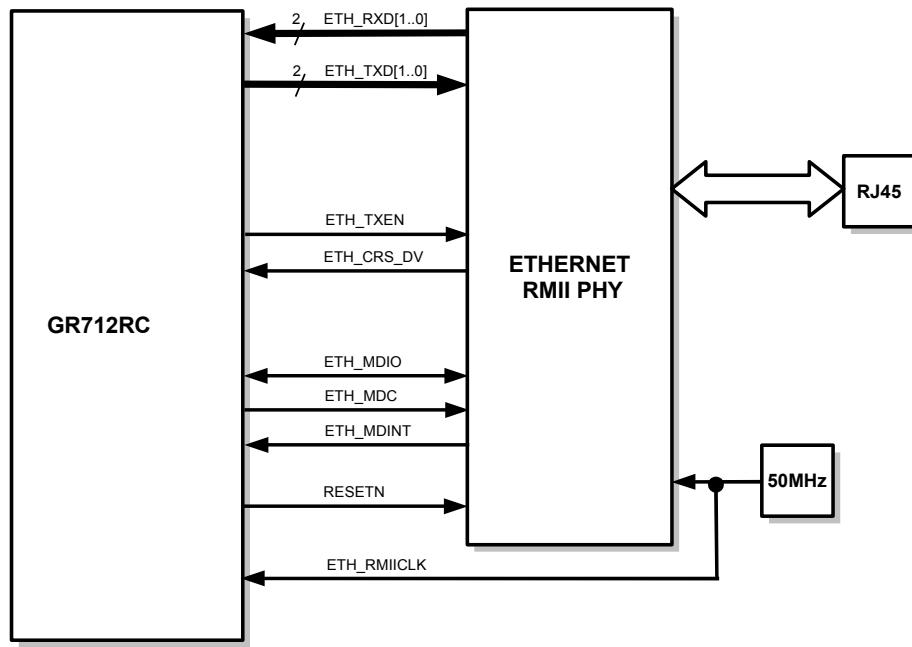
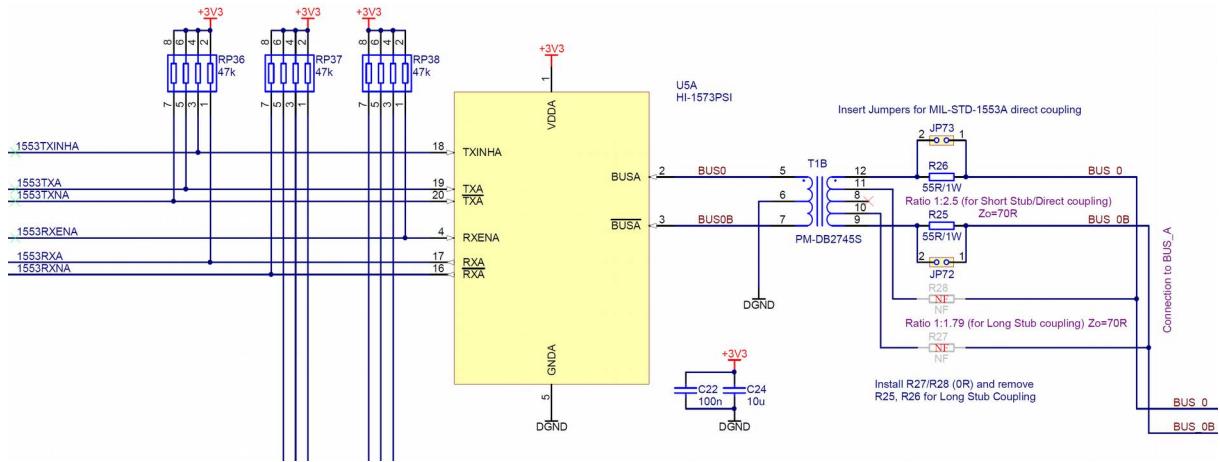


Figure 2-18: Block diagram of Ethernet RMII Interface

## 2.17 MIL-STD-1553 Interface

The board implements a Dual MIL-STD-1553 interface with a 3.3V Transceiver and Transformer circuits as shown in Figure 2-20.

Since there are various 'standard' connectors defined for the connection to MIL-STD-1553 bus, and because of limited PCB area it has instead been decided to implement a D9-Female connected for the connector on the board as this can be most easily adapted to suit the user's desired connector configuration.

Figure 2-19: MIL-STD-1553 Transceiver and Transformer circuit  
(one of two interfaces shown)

## 2.18 Other Interfaces and Circuits

### 2.18.1 GPIO

The 64 general Purpose Input Output signals of the ASIC (3.3V LVTTL voltage levels) are connected to a set of 0.1" pitch pin headers on the board, thus allowing easy access to these signals. A series protection resistor of 470 Ohm is included on each signal, and weak pull ups (47k) are provided on each of the signals lines on the PCB.

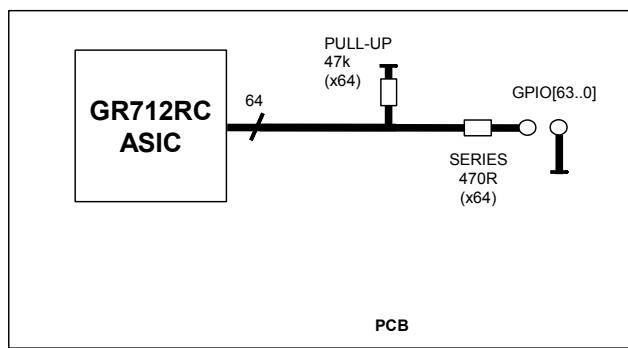


Figure 2-20: PIO interface configuration

Each GPIO signal has a corresponding ground pin on the pin header, thus allowing easy connection to ribbon cable or other external interfaces. If defined as inputs, the GPIO will have a default value of '1' (high) due to the Pull-up resistor, but can be set to '0' (low) by inserting a jumper over the corresponding Header pins.

Note that GPIO[31..0] correspond to the GR712RC pin function GPIO1[31..0], and GPIO[63..32] correspond to the GR712RC pin function GPIO2[31..0].

### 2.18.2 Reset Circuit and Button

A standard Processor Power Supervisory circuit (TPS3705 or equivalent) is provided on the Board to provide monitoring of the 3.3V power supply rail and to generate a clean reset signal at power up of the Unit.

To provide a manual reset of the board, a miniature push button switch is provided on the Main PCB for the control. Additionally connections are provided to an additional off-board push-button *RESET* switch if this is required.

### 2.18.3 Watchdog

The *GR712RC AS/C* includes a Watchdog timer function which can be used for the purpose of generating a system reset in the event of a software malfunction or crash.

On this development board the *WDOGN* signal is connected as shown in the Figure 2-21 to the Processor Supervisory circuit.

To utilise the Watchdog feature, it is necessary to appropriately set-up and enable the Watchdog timer. Please consult the *GR712RC User Manual* (RD-4) for the correct register locations and details.

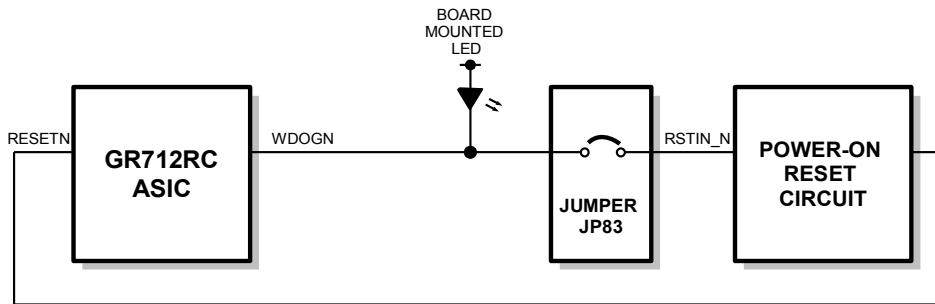


Figure 2-21: Watchdog configuration

Also, to allow the *WDOGN* signal to generate a system reset it is necessary to install the Jumper JP83 (see Figure 2-21).

For software development it is often convenient or necessary to disable the Watchdog triggering in order to be able to easily debug without interference from the Watchdog operation. In this case, the Jumper JP83 should be in the *removed*. When the watchdog triggers, the Watchdog LED will illuminate, but a system reset will not occur.

#### 2.18.4 JTAG interface

The JTAG signals form the ASIC are connected to an FT2232HL interface chip. This chip provides a conversion to a standard USB interface on the front edge of the board (J12).

Special drivers in the GRMON debug software are able to communicate with this chip in order to enable a standard USB connection on a host computer to be used to perform the DSU Debug over the JTAG link of the ASIC.

#### 2.18.5 I2C interface

As shown in Figure 2-22, the I2C interface pins of the GR712RC ASIC are connected to an 4 pin 0.1" header on the board, and Jumper JP70 allows pull-up resistors to be installed if the interface configuration requires them.

The GR712-BOARD provides an on-board DS1672 Real-Time Clock circuit, as an example I2C circuit.

#### 2.18.6 SPI interface

As shown in Figure 2-23, the SPI interface pins of the GR712RC ASIC are connected to an 12 pin 0.1" header on the board. The SPI Chip Select pin is provided by an otherwise unused GPIO pin. Since the same pin is not available in all configurations, multiple GPIO pins are provided on the 12 pin header, and the User should choose an appropriate pin.

The GR712-BOARD provides an on-board AD7841, Temperature monitor circuit, as an example SPI circuit. The Chip Select for this device is provided by GPIO54.

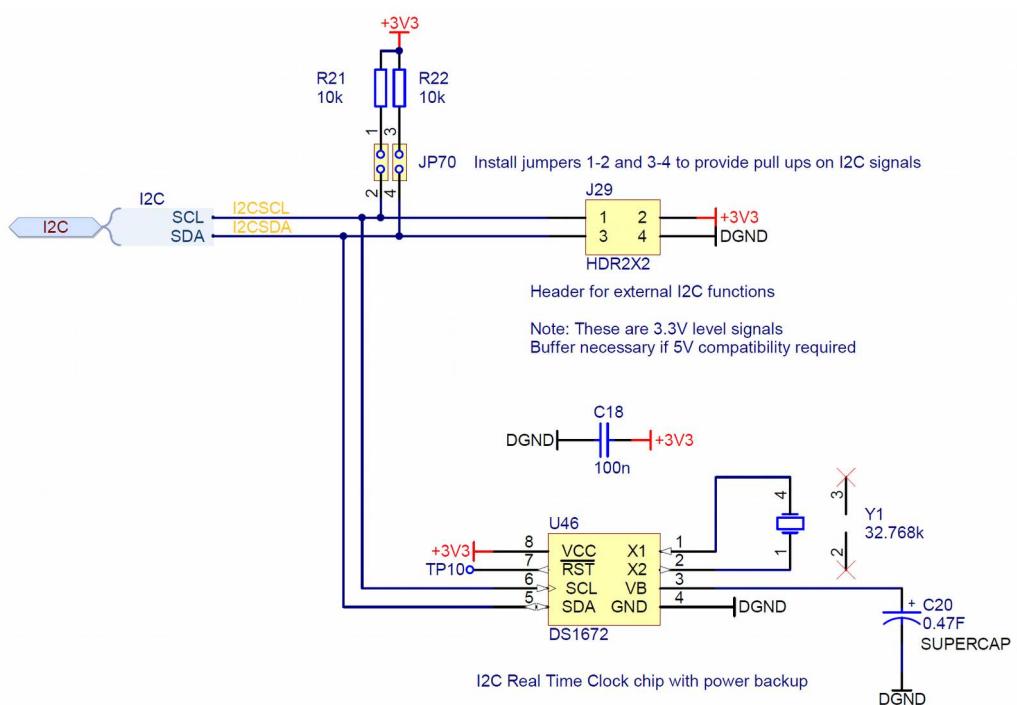
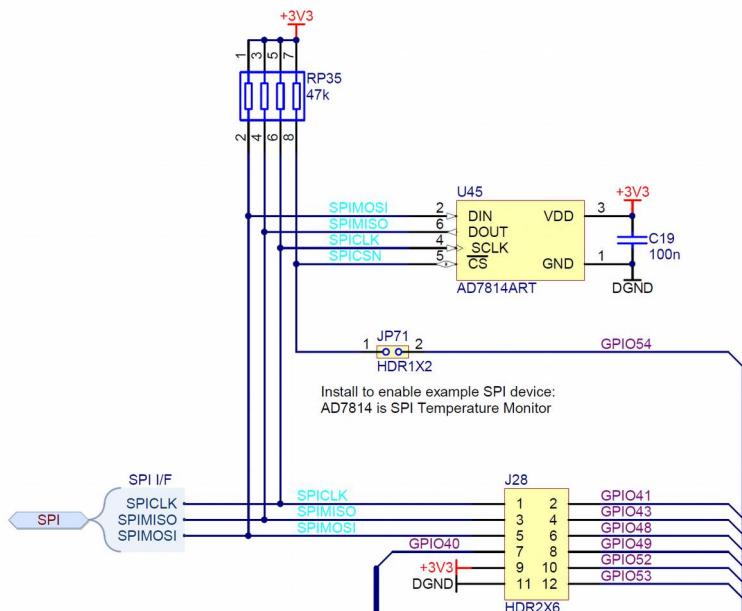
Figure 2-22: I<sup>2</sup>C Interface Configuration

Figure 2-23: SPI Interface Configuration

### 3 SETTING UP AND USING THE BOARD

The default status of the Jumpers on the boards is as shown in Table 3-1.

For the meaning of the various jumpers, refer to Table 4-38 and RD 1.

Jumper	Jumper Setting	Comment
JP1	Installed 3-5 and 4-6	Connects TX0/RX0 to RS232 interface
JP2	Installed 3-5 and 4-6	Connects TX1/RX1 to RS232 interface
JP3-JP66	Installed 1-2 to connect all signals as GPIO	User sets these jumpers according to which configuration and interfaces are to be used. See section 2.4.
JP67	No connections	Not normally used
JP68	Not defined	
JP69	Not defined	
JP70	Installed 1-2 and 3-4	10k pull ups enabled on I2C interface
JP71	Not installed	Install 1-2 to allow GPIO54 to act as SPI chip select of on-board SPI chip
JP72	Not installed	Only required for Direct Coupling
JP73	Not installed	Only required for Direct Coupling
JP74	Not installed	Only required for Direct Coupling
JP75	Not installed	Only required for Direct Coupling
JP76	Installed 1-2, 3-4, 5-6, 7-8	Only remove if on-board RAM and FLASH is to be disabled
JP77	Not installed	Only install if PROM writing is to be disabled
JP78	Installed 1-3	End-stub termination enabled – see section 2.5.1
JP79	Installed 1-3	End-stub termination enabled – see section 2.5.1
JP80	Installed 1-2	Can be used as current measure point for 3.3V supply to ASIC
JP81	Installed 1-2	Can be used as current measure point for 1.8V supply to ASIC
JP82	Not installed	Connections only required if External RESET switch is required.
JP83	Not installed	Prevents Watchdog time-out from resetting board. Install to allow Watchdog to reset board.
JP84	Installed 2-3	Uses Oscillator in socket X2 as main clock.
JP85	Not installed	Install to pull pin HIGH to enable PROM EDAC
JP86	Not installed	Connections only required if External DSU Break switch is required.
JP87	Not installed	Only install for internal PLL to be bypassed
JP88	Not installed	A separate 100 MHz osc.. is installed in X5 for SPW_CLK
JP89	Not used	Only used if a CPCI front panel would be installed.

Table 3-1: Default Status of Jumpers/Switches

To operate the unit stand alone on the bench top, connect the +5V power supply to the Power Socket J14 at the back of the unit.

The POWER LED should be illuminated indicating that the +3.3V power is active.

Upon power on, the Processor will start executing instructions beginning at the memory location 0x00000000, which is the start of the PROM. If the PROM is 'empty' or no valid program is installed, the first executed instruction will be invalid, and the processor will halt with an ERROR condition, with the ERROR LED illuminated.

To perform software download and debugging on the processor, a link from the Host computer to the DSU interface of the board is necessary. A connection to the DSU of the board can be made using a JTAG cable from the Host PC to the JTAG connector on the front of the PCB.

To perform program download and software debugging on the hardware it is necessary to use the Gaisler Research *GRMON* debugging software, installed on a host PC (as represented in Figure 2-15).

Note that it is necessary to use the 'PRO' version of GRMON, as the *GR712RC ASIC* incorporates FT features. It is not possible to use evaluation version of GRMON with this ASIC. Please refer to the *GRMON* documentation for the installation of the software on the host PC (Linux or Windows), and for the installation of the associated hardware dongle.

Starting *GRMON*, with the command:

```
grmon -ftdi -freq 48
```

will establish a link to the DSU, and will initialise the processor registers and timers.

In the example shown in Figure 3-1 a connection is being made with GRMON over the JTAG interface.

(Where '48' is the clock frequency of the main processor oscillator).

Typing the command *flash* will report the detected Flash Prom memory configuration and *info sys* will provide more information on the processors registers and internal cores as shown in Figure 3-3.

Program download and debugging can be performed in the usual manner. More information on the usage, commands and debugging features of *GRMON*, is given in the *GRMON Users Manual* and associated documentation.

```

richard@hp2510p:~$ sudo grmon/grmon.linux -ftdi -ramws 1 -u
GRMON LEON debug monitor v1.1.44 professional version

Copyright (C) 2004-2010 Cobham Gaisler - all rights reserved.
For latest updates, go to http://www.gaisler.com/
Comments or bug-reports to support@gaisler.com

This debug version will expire on 1/8/2011
JTAG chain: GR712RC

Device ID: : 0x712
GRLIB build version: 3696

initialising ..... .
detected frequency: 48 MHz

Component                                Vendor
LEON3FT SPARC V8 Processor                Gaisler Research
LEON3FT SPARC V8 Processor                Gaisler Research
AHB Debug JTAG TAP                      Gaisler Research
GR Ethernet MAC                          Gaisler Research
SatCAN controller                        Gaisler Research
GRSPW2 Spacewire Link                   Gaisler Research
Actel MIL-STD-1553 BRM                  Gaisler Research
CCSDS Telecommand Decoder               Gaisler Research
CCSDS Telemetry Encoder                Gaisler Research
SLINK master                            Gaisler Research
FT Memory Controller                   Gaisler Research
AHB/APB Bridge                         Gaisler Research
LEON3 Debug Support Unit               Gaisler Research
AHB/APB Bridge                         Gaisler Research
OC CAN controller                      Gaisler Research
FT AHB static ram                     Gaisler Research
Generic APB UART                       Gaisler Research
Multi-processor Interrupt Ctrl        Gaisler Research
Modular Timer Unit                     Gaisler Research
SPI Controller                         Gaisler Research
CAN bus multiplexer                    Gaisler Research
General purpose registers             Gaisler Research
ASCS Master                            Gaisler Research
General purpose I/O port              Gaisler Research
General purpose I/O port              Gaisler Research
AMBA Wrapper for OC I2C-master       Gaisler Research
Clock gating unit                     Gaisler Research
AHB status register                   Gaisler Research
Generic APB UART                      Gaisler Research
Modular Timer Unit                   Gaisler Research

Use command 'info sys' to print a detailed report of attached cores
grlib> flash

Intel-style 8-bit flash on D[31:24]

Manuf.      Intel
Device     MT28F640J3

Device ID 0adcfffffc6019e49
User ID ffffffffffffffff
1 x 8 Mbyte = 8 Mbyte total @ 0x00000000

CFI info
flash family   : 1
flash size    : 64 Mbit
erase regions : 1
erase blocks  : 64

```

Figure 3-1: GRMON Listing - 1

```

write buffer : 32 bytes
region 0 : 64 blocks of 128 Kbytes

grlib> info sys
00.01:053 Gaisler Research LEON3FT SPARC V8 Processor (ver 0x0)
          ahb master 0
01.01:053 Gaisler Research LEON3FT SPARC V8 Processor (ver 0x0)
          ahb master 1
02.01:01c Gaisler Research AHB Debug JTAG TAP (ver 0x0)
          ahb master 2
03.01:01d Gaisler Research GR Ethernet MAC (ver 0x0)
          ahb master 3, irq 14
          apb: 80000e00 - 80000f00
04.01:080 Gaisler Research SatCAN controller (ver 0x0)
          ahb master 4, irq 14
          ahb: fff20000 - fff20100
05.01:029 Gaisler Research GRSPW2 Spacewire Link (ver 0x0)
          ahb master 5, irq 22
          apb: 80100800 - 80100900
06.01:029 Gaisler Research GRSPW2 Spacewire Link (ver 0x0)
          ahb master 6, irq 23
          apb: 80100900 - 80100a00
07.01:029 Gaisler Research GRSPW2 Spacewire Link (ver 0x0)
          ahb master 7, irq 24
          apb: 80100a00 - 80100b00
08.01:029 Gaisler Research GRSPW2 Spacewire Link (ver 0x0)
          ahb master 8, irq 25
          apb: 80100b00 - 80100c00
09.01:029 Gaisler Research GRSPW2 Spacewire Link (ver 0x0)
          ahb master 9, irq 26
          apb: 80100c00 - 80100d00
0a.01:029 Gaisler Research GRSPW2 Spacewire Link (ver 0x0)
          ahb master 10, irq 27
          apb: 80100d00 - 80100e00
0b.01:072 Gaisler Research Actel MIL-STD-1553 BRM (ver 0x0)
          ahb master 11, irq 14
          ahb: fff00000 - fff01000
0c.01:031 Gaisler Research CCSDS Telecommand Decoder (ver 0x2)
          ahb master 12, irq 14
          ahb: ffff10000 - ffff10100
0d.01:030 Gaisler Research CCSDS Telemetry Encoder (ver 0x0)
          ahb master 13, irq 29
          apb: 80000b00 - 80000c00
0e.01:02f Gaisler Research SLINK master (ver 0x1)
          ahb master 14, irq 13
          apb: 80000800 - 80000900
00.01:054 Gaisler Research FT Memory Controller (ver 0x1)
          ahb: 00000000 - 20000000
          ahb: 20000000 - 40000000
          ahb: 40000000 - 80000000
          apb: 80000000 - 80000100
          8-bit prom @ 0x00000000
          32-bit static ram: 1 * 8192 kbyte @ 0x40000000
01.01:006 Gaisler Research AHB/APB Bridge (ver 0x0)
          ahb: 80000000 - 80100000
02.01:004 Gaisler Research LEON3 Debug Support Unit (ver 0x1)
          ahb: 90000000 - a0000000
          AHB trace 256 lines, 32-bit bus, stack pointer 0x407ffff0
          CPU#0 win 8, hwbp 2, itrace 256, V8 mul/div, srmmu, lddel 1, GRFPU
          icache 4 * 4 kbyte, 32 byte/line lru
          dcache 4 * 4 kbyte, 16 byte/line lru
          CPU#1 win 8, hwbp 2, itrace 256, V8 mul/div, srmmu, lddel 1, GRFPU
          icache 4 * 4 kbyte, 32 byte/line lru
          dcache 4 * 4 kbyte, 16 byte/line lru
03.01:006 Gaisler Research AHB/APB Bridge (ver 0x0)
          ahb: 80100000 - 80200000
06.01:019 Gaisler Research OC CAN controller (ver 0x1)
          irq 5
          ahb: fff30000 - fff31000
          cores: 2
07.01:050 Gaisler Research FT AHB static ram (ver 0x12)
          ahb: a0000000 - a0100000
          apb: 80100000 - 80100100
          256 kbyte AHB ram @ 0xa0000000

```

Figure 3-2: GRMON Listing - 2

```

01.01:00c Gaisler Research Generic APB UART (ver 0x1)
    irq 2
    apb: 80000100 - 80000200
    baud rate 38461, DSU mode (FIFO debug)
02.01:00d Gaisler Research Multi-processor Interrupt Ctrl (ver 0x3)
    apb: 80000200 - 80000300
03.01:011 Gaisler Research Modular Timer Unit (ver 0x0)
    irq 8
    apb: 80000300 - 80000400
    16-bit scaler, 4 * 32-bit timers, divisor 48
04.01:02d Gaisler Research SPI Controller (ver 0x2)
    irq 13
    apb: 80000400 - 80000500
    FIFO depth: 16, no slave select lines
    Maximum word length: 32 bits
05.01:081 Gaisler Research CAN bus multiplexer (ver 0x0)
    apb: 80000500 - 80000600
06.01:087 Gaisler Research General purpose registers (ver 0x0)
    apb: 80000600 - 80000700
07.01:043 Gaisler Research ASCS Master (ver 0x0)
    irq 16
    apb: 80000700 - 80000800
    2 slaves, 16 bit words
09.01:01a Gaisler Research General purpose I/O port (ver 0x0)
    apb: 80000900 - 80000a00
0a.01:01a Gaisler Research General purpose I/O port (ver 0x0)
    apb: 80000a00 - 80000b00
0c.01:028 Gaisler Research AMBA Wrapper for OC I2C-master (ver 0x1)
    irq 28
    apb: 80000c00 - 80000d00
0d.01:02c Gaisler Research Clock gating unit (ver 0x0)
    apb: 80000d00 - 80000e00
    GRMON did NOT enable clocks during initialization
0f.01:052 Gaisler Research AHB status register (ver 0x0)
    irq 1
    apb: 80000f00 - 80001000
01.01:00c Gaisler Research Generic APB UART (ver 0x1)
    irq 17
    apb: 80100100 - 80100200
    baud rate 38461
02.01:00c Gaisler Research Generic APB UART (ver 0x1)
    irq 18
    apb: 80100200 - 80100300
    baud rate 38461
03.01:00c Gaisler Research Generic APB UART (ver 0x1)
    irq 19
    apb: 80100300 - 80100400
    baud rate 38461
04.01:00c Gaisler Research Generic APB UART (ver 0x1)
    irq 20
    apb: 80100400 - 80100500
    baud rate 38461
05.01:00c Gaisler Research Generic APB UART (ver 0x1)
    irq 21
    apb: 80100500 - 80100600
    baud rate 38461
06.01:038 Gaisler Research Modular Timer Unit (ver 0x1)
    irq 7
    apb: 80100600 - 80100700
    8-bit scaler, 2 * 32-bit timers, divisor 48
grlib> lo Desktop/gr-test/leon3/samples/stanford
section: .text at 0x40000000, size 54288 bytes
section: .data at 0x4000d410, size 2080 bytes
total size: 56368 bytes (762.6 kbit/s)
read 278 symbols
entry point: 0x40000000
grlib> run
Starting
      Perm    Towers   Queens   Intmm     Mm    Puzzle   Quick   Bubble   Tree    FFT
      50       50        17       66     850     183      33       50     217     867

Nonfloating point composite is          111
Floating point composite is           744
Program exited normally.
grlib>

```

Figure 3-3: GRMON Listing - 3

## 4 INTERFACES AND CONFIGURATION

### 4.1 List of Front/Back Panel Connectors

Name	Function	Type	Description
J1A upper	UART-0	D9-S (Female)	Connections for Serial UART-10 (RS232)
J1B lower	UART-1	D9-S (Female)	Connections for Serial UART-1 (RS232)
J2A upper	CANBUS-0	Dual D9-P (male)	Connections for CANBUS-0 interface
J2B lower	CANBUS-1	Dual D9-P (male)	Connections for CANBUS-1 interface
J3	SPW-0	MDM9-S (female)	LVDS connections for Spacewire Interface-0
J4	SPW-1	MDM9-S (female)	LVDS connections for Spacewire Interface-1
J5	SPW-2	MDM9-S (female)	LVDS connections for Spacewire Interface-2
J6	SPW-3	MDM9-S (female)	LVDS connections for Spacewire Interface-3
J7	SPW-4	MDM9-S (female)	LVDS connections for Spacewire Interface-4
J8	SPW-5	MDM9-S (female)	LVDS connections for Spacewire Interface-5
J9	MEM I/O	AMP 5177984-5	Memory I/O connector -120 pin 0.8mm pitch
J10	ETHERNET	RJ45	10/100Mbit/s Ethernet Connector
J11	GEN I/O	AMP 5177984-2	General I/O connector – 80 pin 0.8mm pitch
J12	JTAG	USB-Mini-AB	JTAG signal interface (over USB)
J13	MIL-STD-1553	D9-P (male)	Dual MIL-STD-1553 interface
J14	POWER-IN	2.1mm center +ve	+5V DC power input connector
J15	SODIMM	144 pin SODIMM	Socket for SODIMM SDRAM module
J16	TX[9..0]	20 pin 0.1" Header	Pin connections for RS422 TX pairs 0 to 9
J17	TX[19..10]	20 pin 0.1" Header	Pin connections for RS422 TX pairs 10 to 19
J18	RX[9..0]	20 pin 0.1" Header	Pin connections for RS422 RX pairs 0 to 9
J19	RX[19..10]	20 pin 0.1" Header	Pin connections for RS422 RX pairs 10 to 19
J20	RX[27..20]	20 pin 0.1" Header	Pin connections for RS422 RX pairs 20 to 29
J21	GPIO[9..0]	20 pin 0.1" Header	Pin connections for PIO signals 0 to 9
J22	GPIO[19..10]	20 pin 0.1" Header	Pin connections for PIO signals 10 to 19
J23	GPIO[29..20]	20 pin 0.1" Header	Pin connections for PIO signals 20 to 29
J24	GPIO[39..30]	20 pin 0.1" Header	Pin connections for PIO signals 30 to 39
J25	GPIO[49..40]	20 pin 0.1" Header	Pin connections for PIO signals 40 to 49
J26	GPIO[59..50]	20 pin 0.1" Header	Pin connections for PIO signals 50 to 59
J27	GPIO[66..60]	20 pin 0.1" Header	Pin connections for PIO signals 60 to 66
J28	I2C-USER	12 pin 0.1" Header	Pin connections for User I2C interface
J29	SPI-USER	4 pin 0.1" Header	Pin connections for User SPI interface
J30	POWER-IN'	Mate-N-Lok 4pin	Alternative power input for 4 pin IDE style connector
J31	SPW_CLK	SMA	SPW Clock Monitor or Injection

Table 4-1: List of Connectors

<b>Pin</b>	<b>Name</b>	<b>Comment</b>
1		No connect
6		No connect
2	TXD-0	Transmit pin
7		No connect
3	RXD-0	Receive pin
8		No connect
4		No connect
9		No connect
5	GND	Ground

Table 4-2: J1A (upper connector) UART-0 - Serial Interface (RS232) connections

<b>Pin</b>	<b>Name</b>	<b>Comment</b>
1		No connect
6		No connect
2	TXD-1	Transmit pin
7		No connect
3	RXD-1	Receive pin
8		No connect
4		No connect
9		No connect
5	GND	Ground

Table 4-3: J1B (lower connector) UART-1 - Serial Interface (RS232) connections

<b>Pin</b>	<b>Name</b>	<b>Comment</b>
1		No connect
6	GND	Ground
2	CAN1_L	CAN Dominant Low
7	CAN1_H	CAN Dominant High
3	GND	Ground
8		No connect
4		No connect
9		No connect
5	CANSHD1	Shield

Table 4-4: J2A (upper connector) CANBUS-1 interface connections

<b>Pin</b>	<b>Name</b>	<b>Comment</b>
1		No connect
6	DGND	Ground
2	CAN0_L	CAN Dominant Low
7	CAN0_H	CAN Dominant High
3	DGND	Ground
8		No connect
4		No connect
9		No connect
5	CANSHDO	Shield

Table 4-5: J2B (lower connector) CANBUS-0 interface connections

<b>Pin</b>	<b>Name</b>	<b>Comment</b>
1	DIN0+	Data In +ve
6	DIN0-	Data In -ve
2	SIN0+	Strobe In +ve
7	SIN0-	Strobe In -ve
3	SHIELD	Inner Shield
8	SOUT0+	Strobe Out +ve
4	SOUT0-	Strobe Out -ve
9	DOUT0+	Data Out +ve
5	DOUT0-	Data Out -ve

Table 4-6: J3 SPW-0 interface connections

<b>Pin</b>	<b>Name</b>	<b>Comment</b>
1	DIN1+	Data In +ve
6	DIN1-	Data In -ve
2	SIN1+	Strobe In +ve
7	SIN1-	Strobe In -ve
3	SHIELD	Inner Shield
8	SOUT1+	Strobe Out +ve
4	SOUT1-	Strobe Out -ve
9	DOUT1+	Data Out +ve
5	DOUT1-	Data Out -ve

Table 4-7: J4 SPW-1 interface connections

---

<b>Pin</b>	<b>Name</b>	<b>Comment</b>
1	DIN2+	Data In +ve
6	DIN2-	Data In -ve
2	SIN2+	Strobe In +ve
7	SIN2-	Strobe In -ve
3	SHIELD	Inner Shield
8	SOUT2+	Strobe Out +ve
4	SOUT2-	Strobe Out -ve
9	DOUT2+	Data Out +ve
5	DOUT2-	Data Out -ve

Table 4-8: J5 SPW-2 interface connections

<b>Pin</b>	<b>Name</b>	<b>Comment</b>
1	DIN3+	Data In +ve
6	DIN3-	Data In -ve
2	SIN3+	Strobe In +ve
7	SIN3-	Strobe In -ve
3	SHIELD	Inner Shield
8	SOUT3+	Strobe Out +ve
4	SOUT3-	Strobe Out -ve
9	DOUT3+	Data Out +ve
5	DOUT3-	Data Out -ve

Table 4-9: J6 SPW-3 interface connections

<b>Pin</b>	<b>Name</b>	<b>Comment</b>
1	DIN2+	Data In +ve
6	DIN2-	Data In -ve
2	SIN2+	Strobe In +ve
7	SIN2-	Strobe In -ve
3	SHIELD	Inner Shield
8	SOUT2+	Strobe Out +ve
4	SOUT2-	Strobe Out -ve
9	DOUT2+	Data Out +ve
5	DOUT2-	Data Out -ve

Table 4-10: J7 SPW-4 interface connections

Pin	Name	Comment
1	DIN5+	Data In +ve
6	DIN5-	Data In -ve
2	SIN5+	Strobe In +ve
7	SIN5-	Strobe In -ve
3	SHIELD	Inner Shield
8	SOUT5+	Strobe Out +ve
4	SOUT5-	Strobe Out -ve
9	DOUT5+	Data Out +ve
5	DOUT5-	Data Out -ve

Table 4-11: J8 SPW-5 interface connections

FUNCTION	ASIC pin	CONNECTOR PIN	ASIC pin	FUNCTION
DGND		1	120	DGND
+5V		2	119	+5V
DGND		3	118	DGND
-12V		4	117	-12V
DGND		5	116	DGND
+12V		6	115	+12V
DGND		7	114	DGND
D15	40	8	113	D31
D7	52	9	112	D23
+3.3V		10	111	+3.3V
DGND		11	110	DGND
D14	41	12	109	D30
D6	53	13	108	D22
D13	42	14	107	D29
D5	54	15	106	D21
D12	43	16	105	D28
D4	55	17	104	D20
D11	44	18	103	D27
D3	56	19	102	D19
+3.3V		20	101	+3.3V
DGND		21	100	DGND
D10	45	22	99	D26
D2	57	23	98	D18
D9	46	24	97	D25
D1	58	25	96	D17
D8	49	26	95	D24
D0	59	27	94	D16
(DGND)		28	93	(DGND)
(DGND)		29	92	(DGND)
+3.3V		30	91	+3.3V
DGND		31	90	DGND
A22	87	32	89	A23
A20	92	33	88	A21
A18	97	34	87	A19
A16	98	35	86	A17
A14	89	36	85	A15
A12	82	37	84	A13
A10	80	38	83	A11
A8	74	39	82	A9
+3.3V		40	81	+3.3V
DGND		41	80	DGND
A6	72	42	79	A7
A4	68	43	78	A5
A2	64	44	77	A3
A0	62	45	76	A1
WRITEN	107	46	75	READ
OEN	126	47	74	IOSN
ROMSN0	101	48	73	ROMSN1
(+3.3V)		49	72	(+3.3V)
+3.3V		50	71	+3.3V
DGND		51	70	DGND
(+3.3V)		52	69	RAMOEN
(+3.3V)		53	68	RAMOEN
RAMSN1	110	54	67	RAMOEN
RAMSN0	109	55	66	RAMOEN
RWEN	112	56	65	RWEN
RWEN	112	57	64	RWEN
BRDYN	113	58	63	BEXCN
RESETN		59	62	CLK
DGND		60	61	DGND

Table 4-12: Expansion connector J9 Pin-out (see also section 2.3.4)

---

<b>Pin</b>	<b>Name</b>	<b>Comment</b>
1	TPFOP	Output +ve
2	TPFON	Output -ve
3	TPFIP	Input +ve
4	TPFOC	Output centre-tap
5		No connect
6	TPFIN	Input -ve
7	TPFIC	Input centre-tap
8		No connect

Table 4-13: J10 RJ45-ETHERNET Connector

<b>FUNCTION</b>	<b>ASIC pin</b>	<b>CONNECTOR PIN</b>	<b>FUNCTION</b>
DGND		1 60	DGND
CB6	5	2 59	CB7
CB4	9	3 58	CB5
CB2	11	4 57	CB3
CB0	15	5 56	CB1
		6 55	
		7 54	
		8 53	
		9 52	
DGND	10	51	DGND
+3.3V	11	50	+3.3V
		12 49	
		13 48	
		14 47	
		15 46	
		16 45	
		17 44	
		18 43	
		19 42	
DGND	20	41	DGND
+3.3V	21	40	+3.3V
		22 39	
		23 38	
		24 37	
		25 36	
		26 35	
		27 34	
		28 33	
		29 32	
DGND	30	31	DGND

Table 4-14: Expansion connector J11 Pin-out (see also section 2.3.4)

---

<b>Pin</b>	<b>Name</b>	<b>Comment</b>
1	VDD	+5V (from external device)
2	DM	Data Minus
3	DP	Data Plus
4	DGND	Ground

Table 4-15: J12 ASIC– JTAG Connector (over USB)

<b>Pin</b>	<b>Name</b>	<b>Comment</b>
1	BUS_0	BUS_0 positive
6	GND	Ground
2	BUS_0B	BUS_0 negative
7		No connect
3		No connect
8		No connect
4	BUS_1	BUS_1 positive
9	GND	Ground
5	BUS_1B	BUS_1 negative

Table 4-16: J13 Dual MIL-STD-1553 interface connections

<b>Pin</b>	<b>Name</b>	<b>Comment</b>
+VE	+5V	Inner Pin, 5V, typically TBD A
-VE	GND	Outer Pin Return

Table 4-17: J14 POWER – External Power Connector

FUNCTION	ASIC PIN	CONNECTOR PIN	ASIC PIN	FUNCTION
DGND		1	2	DGND
D31		3	4	CB7
D30		5	6	CB6
D29		7	8	CB5
D28		9	10	CB4
+3.3V		11	12	+3.3V
D27		13	14	CB3
D26		15	16	CB2
D25		17	18	CB1
D24		19	20	CB0
DGND		21	22	DGND
SDDQM3		23	24	SDDQM0
SDDQM2		25	26	SDDQM5 / pulled high
+3.3V		27	28	+3.3V
A2		29	30	A5
A3		31	32	A6
A4		33	34	A7
DGND		35	36	DGND
D23		37	38	nc
D22		39	40	nc
D21		41	42	nc
D20		43	44	nc
+3.3V		45	46	+3.3V
D19		47	48	nc
D18		49	50	nc
D17		51	52	nc
D16		53	54	nc
DGND		55	56	DGND
nc		57	58	nc
nc		59	60	nc
SDCLK0		61	62	SDCKE0/ pulled high
+3.3V		63	64	+3.3V
SDRASN		65	66	SDCASN
SDWEN		67	68	SDCKE1/ pulled high
SDCSN0		69	70	A17
SDCSN1		71	72	A14
nc		73	74	SDCLK1
DGND		75	76	DGND
nc		77	78	nc
nc		79	80	nc
+3.3V		81	82	+3.3V
D15		83	84	nc
D14		85	86	nc
D13		87	88	nc
D12		89	90	nc
DGND		91	92	DGND
D11		93	94	nc
D10		95	96	nc
D9		97	98	nc
D8		99	100	nc
+3.3V		101	102	+3.3V
A8		103	104	A9
A10		105	106	A15 (SBA0)
DGND		107	108	DGND
A11		109	110	A16 (SBA1)
A12		111	112	A13
+3.3V		113	114	+3.3V
SDDQM1		115	116	SDDQM6 / pulled high
SDDQM0		117	118	SDDQM7 / pulled high
DGND		119	120	DGND
D7		121	122	nc
D6		123	124	nc
D5		125	126	nc
D4		127	128	nc
+3.3V		129	130	+3.3V
D3		131	132	nc
D2		133	134	nc
D1		135	136	nc
D0		137	138	nc
DGND		139	140	DGND
SDSDA / pulled high		141	142	SDSCL / pulled high
+3.3V		143	144	+3.3V

Table 4-18: SODIMM socket J15 Pin-out

<u>FUNCTION</u>	<u>ASIC pin</u>	<u>CONNECTOR PIN</u>	<u>FUNCTION</u>
TX0P	1	■ □	2
TX1P	3	□ □	4
TX2P	5	□ □	6
TX3P	7	□ □	8
TX4P	9	□ □	10
TX5P	11	□ □	12
TX6P	13	□ □	14
TX7P	15	□ □	16
TX8P	17	□ □	18
TX9P	19	□ □	20

Table 4-19: J16 RS422 Transmitter Pairs

<u>FUNCTION</u>	<u>ASIC pin</u>	<u>CONNECTOR PIN</u>	<u>FUNCTION</u>
TX10P	1	■ □	2
TX11P	3	□ □	4
TX12P	5	□ □	6
TX13P	7	□ □	8
TX14P	9	□ □	10
TX15P	11	□ □	12
TX16P	13	□ □	14
TX17P	15	□ □	16
TX18P	17	□ □	18
TX19P	19	□ □	20

Table 4-20: J17 RS422 Transmitter Pairs

<u>FUNCTION</u>	<u>ASIC pin</u>	<u>CONNECTOR PIN</u>	<u>FUNCTION</u>
RX0P	1	■ □	2
RX1P	3	□ □	4
RX2P	5	□ □	6
RX3P	7	□ □	8
RX4P	9	□ □	10
RX5P	11	□ □	12
RX6P	13	□ □	14
RX7P	15	□ □	16
RX8P	17	□ □	18
RX9P	19	□ □	20

Table 4-21: J18 RS422 Receiver Pairs

<u>FUNCTION</u>	<u>ASIC pin</u>	<u>CONNECTOR PIN</u>	<u>FUNCTION</u>
RX10P	1	■ □	2
RX11P	3	□ □	4
RX12P	5	□ □	6
RX13P	7	□ □	8
RX14P	9	□ □	10
RX15P	11	□ □	12
RX16P	13	□ □	14
RX17P	15	□ □	16
RX18P	17	□ □	18
RX19P	19	□ □	20

Table 4-22: J19 RS422 Receiver Pairs

<u>FUNCTION</u>	<u>ASIC pin</u>	<u>CONNECTOR PIN</u>	<u>FUNCTION</u>
RX20P	1	■ □	2
RX21P	3	□ □	4
RX22P	5	□ □	6
RX23P	7	□ □	8
RX24P	9	□ □	10
RX25P	11	□ □	12
RX26P	13	□ □	14
RX27P	15	□ □	16
nc	17	□ □	18
nc	19	□ □	20

Table 4-23: J20 RS422 Receiver Pairs

<u>FUNCTION</u>	<u>ASIC pin</u>	<u>CONNECTOR PIN</u>	<u>FUNCTION</u>
GPIO0	1	■ □	2
GPIO1	3	□ □	4
GPIO2	5	□ □	6
GPIO3	7	□ □	8
GPIO4	9	□ □	10
GPIO5	11	□ □	12
GPIO6	13	□ □	14
GPIO7	15	□ □	16
GPIO8	17	□ □	18
GPIO9	19	□ □	20

Table 4-24: J21 PIO Header Pin out

<u>FUNCTION</u>	<u>ASIC pin</u>	<u>CONNECTOR PIN</u>	<u>FUNCTION</u>
GPIO10	1	■ □	2
GPIO11	3	□ □	4
GPIO12	5	□ □	6
GPIO13	7	□ □	8
GPIO14	9	□ □	10
GPIO15	11	□ □	12
GPIO16	13	□ □	14
GPIO17	15	□ □	16
GPIO18	17	□ □	18
GPIO19	19	□ □	20

Table 4-25: J22 PIO Header Pin out

<u>FUNCTION</u>	<u>ASIC pin</u>	<u>CONNECTOR PIN</u>	<u>FUNCTION</u>
GPIO20	1	■ □	2
GPIO21	3	□ □	4
GPIO22	5	□ □	6
GPIO23	7	□ □	8
GPIO24	9	□ □	10
GPIO25	11	□ □	12
GPIO26	13	□ □	14
GPIO27	15	□ □	16
GPIO28	17	□ □	18
GPIO29	19	□ □	20

Table 4-26: J23 PIO Header Pin out

<u>FUNCTION</u>	<u>ASIC pin</u>	<u>CONNECTOR PIN</u>	<u>FUNCTION</u>
GPIO30	1	■ □	2 DGND
GPIO31	3	□ □	4 DGND
GPIO32	5	□ □	6 DGND
GPIO33	7	□ □	8 DGND
GPIO34	9	□ □	10 DGND
GPIO35	11	□ □	12 DGND
GPIO36	13	□ □	14 DGND
GPIO37	15	□ □	16 DGND
GPIO38	17	□ □	18 DGND
GPIO39	19	□ □	20 DGND

Table 4-27: J24 PIO Header Pin out

<u>FUNCTION</u>	<u>ASIC pin</u>	<u>CONNECTOR PIN</u>	<u>FUNCTION</u>
GPIO40	1	■ □	2 DGND
GPIO41	3	□ □	4 DGND
GPIO42	5	□ □	6 DGND
GPIO43	7	□ □	8 DGND
GPIO44	9	□ □	10 DGND
GPIO45	11	□ □	12 DGND
GPIO46	13	□ □	14 DGND
GPIO47	15	□ □	16 DGND
GPIO48	17	□ □	18 DGND
GPIO49	19	□ □	20 DGND

Table 4-28: J25 PIO Header Pin out

<u>FUNCTION</u>	<u>ASIC pin</u>	<u>CONNECTOR PIN</u>	<u>FUNCTION</u>
GPIO50	1	■ □	2 DGND
GPIO51	3	□ □	4 DGND
GPIO52	5	□ □	6 DGND
GPIO53	7	□ □	8 DGND
GPIO54	9	□ □	10 DGND
GPIO55	11	□ □	12 DGND
GPIO56	13	□ □	14 DGND
GPIO57	15	□ □	16 DGND
GPIO58	17	□ □	18 DGND
GPIO59	19	□ □	20 DGND

Table 4-29: J26 PIO Header Pin out

<u>FUNCTION</u>	<u>ASIC pin</u>	<u>CONNECTOR PIN</u>	<u>FUNCTION</u>
GPIO60	1	■ □	2 DGND
GPIO61	3	□ □	4 DGND
GPIO62	5	□ □	6 DGND
GPIO63	7	□ □	8 DGND
GPIO64	9	□ □	10 DGND
GPIO65	11	□ □	12 DGND
GPIO66	13	□ □	14 DGND
nc	15	□ □	16 DGND
nc	17	□ □	18 DGND
nc	19	□ □	20 DGND

Table 4-30: J27 PIO Header Pin out

Pin	Name	Comment
1	+12V	+12V Not used
2	DGND	Ground
3	DGND	Ground
4	+5V	+5V, typically TBD A

Table 4-31: J30 POWER – External Power Connector

Pin	Name	Comment
centre	SPWCLK	Clock
outer	GND	Ground

Table 4-32: J31 SPW Clock

## 4.2 List of Oscillators, Switches and LED's

Name	Function	Description
X1	OSC_MAIN	Oscillator for main ASIC clock, SMD type, 3.3V, 48MHz
X2	OSC_USER	Alternative User oscillator for main ASIC clock, DIL8 socket, 3.3V
X3	OSC_1553	Oscillator for 1553 interface functions , 24.0MHz
X4	OSC_ETH	Oscillator for Ethernet PHY transceiver, SMD type, 3.3V, 50.000MHz
X5	OSC_SPW	DIL8 socket for user installed SPW Clock Oscillator, 3.3V
Y1	XTAL_RTC	32.768kHz crystal for I2C Real Time Clock

Table 4-33: List and definition of Oscillators

Name	Function	Description
D1	POWER (3.3V)	Power indicator
D2	ERRORN	Leon processor in 'ERROR' mode
D3	PROM_BUSY	Prom Write/Erase in Progress
D4	WDOG	Watchdog indicator

Table 4-34: List and definition of PCB mounted LED's

Name	Function	Description
S1	RESET	Push button RESET switch
S2	Not used	Not used

Table 4-35: List and definition of Switches

## 4.3 List of Jumpers

Name	Function	Type	Description
JP1	SWMX0 & 1	2X3 pin 0.1" Header	Connects UART0 signals to RS422 or RS232 circuits
JP2	SWMX2	2X3 pin 0.1" Header	Connects UART1 signals to RS422 or RS232 circuits
JP3	SWMX3	2X6 2mm Header	Configuration jumper for SWMX3 pin
JP4	SWMX4	2X6 2mm Header	Configuration jumper for SWMX4 pin
JP5	SWMX5	2X6 2mm Header	Configuration jumper for SWMX5 pin
JP6	SWMX6	2X6 2mm Header	Configuration jumper for SWMX6 pin
JP7	SWMX7	2X6 2mm Header	Configuration jumper for SWMX7 pin
JP8	SWMX8	2X6 2mm Header	Configuration jumper for SWMX8 pin
JP9	SWMX9	2X6 2mm Header	Configuration jumper for SWMX9 pin
JP10	SWMX10	2X6 2mm Header	Configuration jumper for SWMX10 pin
JP11	SWMX11	2X6 2mm Header	Configuration jumper for SWMX11 pin
JP12	SWMX12	2X6 2mm Header	Configuration jumper for SWMX12 pin
JP13	SWMX13	2X6 2mm Header	Configuration jumper for SWMX13 pin
JP14	SWMX14	2X6 2mm Header	Configuration jumper for SWMX14 pin
JP15	SWMX15	2X6 2mm Header	Configuration jumper for SWMX15 pin
JP16	SWMX16	2X6 2mm Header	Configuration jumper for SWMX16 pin
JP17	SWMX17	2X6 2mm Header	Configuration jumper for SWMX17 pin
JP18	SWMX18	2X6 2mm Header	Configuration jumper for SWMX18 pin
JP19	SWMX19	2X6 2mm Header	Configuration jumper for SWMX19 pin
JP20	SWMX20	2X6 2mm Header	Configuration jumper for SWMX20 pin
JP21	SWMX21	2X6 2mm Header	Configuration jumper for SWMX21 pin
JP22	SWMX22	2X6 2mm Header	Configuration jumper for SWMX22 pin
JP23	SWMX23	2X6 2mm Header	Configuration jumper for SWMX23 pin
JP24	SWMX24	2X6 2mm Header	Configuration jumper for SWMX24 pin
JP25	SWMX25	2X6 2mm Header	Configuration jumper for SWMX25 pin
JP26	SWMX26	2X6 2mm Header	Configuration jumper for SWMX26 pin
JP27	SWMX27	2X6 2mm Header	Configuration jumper for SWMX27 pin
JP28	SWMX28	2X6 2mm Header	Configuration jumper for SWMX28 pin
JP29	SWMX29	2X6 2mm Header	Configuration jumper for SWMX29 pin
JP30	SWMX30	2X6 2mm Header	Configuration jumper for SWMX30 pin
JP31	SWMX31	2X6 2mm Header	Configuration jumper for SWMX31 pin
JP32	SWMX32	2X6 2mm Header	Configuration jumper for SWMX32 pin
JP33	SWMX33	2X6 2mm Header	Configuration jumper for SWMX33 pin
JP34	SWMX34	2X6 2mm Header	Configuration jumper for SWMX34 pin
JP35	SWMX35	2X6 2mm Header	Configuration jumper for SWMX35 pin

Table 4-36: List and definition of PCB Jumpers, part 1

(for details refer to schematic, RD 1)

Name	Function	Type	Description
JP36	SWMX36	2X6 2mm Header	Configuration jumper for SWMX36 pin
JP37	SWMX37	2X6 2mm Header	Configuration jumper for SWMX37 pin
JP38	SWMX38	2X6 2mm Header	Configuration jumper for SWMX38 pin
JP39	SWMX39	2X6 2mm Header	Configuration jumper for SWMX39 pin
JP40	SWMX40	2X6 2mm Header	Configuration jumper for SWMX40 pin
JP41	SWMX41	2X6 2mm Header	Configuration jumper for SWMX41 pin
JP42	SWMX42	2X6 2mm Header	Configuration jumper for SWMX42 pin
JP43	SWMX43	2X6 2mm Header	Configuration jumper for SWMX43 pin
JP44	SWMX44	2X6 2mm Header	Configuration jumper for SWMX44 pin
JP45	SWMX45	2X6 2mm Header	Configuration jumper for SWMX45 pin
JP46	SWMX46	2X6 2mm Header	Configuration jumper for SWMX46 pin
JP47	SWMX47	2X6 2mm Header	Configuration jumper for SWMX47 pin
JP48	SWMX48	2X6 2mm Header	Configuration jumper for SWMX48 pin
JP49	SWMX49	2X6 2mm Header	Configuration jumper for SWMX49 pin
JP50	SWMX50	2X6 2mm Header	Configuration jumper for SWMX50 pin
JP51	SWMX51	2X6 2mm Header	Configuration jumper for SWMX51 pin
JP52	SWMX52	2X6 2mm Header	Configuration jumper for SWMX52 pin
JP53	SWMX53	2X6 2mm Header	Configuration jumper for SWMX53 pin
JP54	SWMX54	2X6 2mm Header	Configuration jumper for SWMX54 pin
JP55	SWMX55	2X6 2mm Header	Configuration jumper for SWMX55 pin
JP56	SWMX56	2X6 2mm Header	Configuration jumper for SWMX56 pin
JP57	SWMX57	2X6 2mm Header	Configuration jumper for SWMX57 pin
JP58	SWMX58	2X6 2mm Header	Configuration jumper for SWMX58 pin
JP59	SWMX59	2X6 2mm Header	Configuration jumper for SWMX59 pin
JP60	SWMX60	2X6 2mm Header	Configuration jumper for SWMX60 pin
JP61	SWMX61	2X6 2mm Header	Configuration jumper for SWMX61 pin
JP62	SWMX62	2X6 2mm Header	Configuration jumper for SWMX62 pin
JP63	SWMX63	2X6 2mm Header	Configuration jumper for SWMX63 pin
JP64	SWMX64	2X6 2mm Header	Configuration jumper for SWMX64 pin
JP65	SWMX65	2X6 2mm Header	Configuration jumper for SWMX65 pin
JP66	SWMX66	2X6 2mm Header	Configuration jumper for SWMX66 pin
JP67	SPARE RS422	4 pin 0.1" Header	Header providing access to Spare RS422 signals
JP68	---	---	Not used
JP69	---	---	Not used
JP70	I2C-PULLUP	2X2 pin 0.1" Header	Install pull ups on I2C signals
JP71	SPI_CSN	1X2 pin 0.1" Header	Enable/Disable on board SPI circuit

Table 4-37: List and definition of PCB Jumpers, part 2

(for details refer to schematic, RD 1)

Name	Function	Type	Description
JP72	BUS0	1X2 pin 0.1" Header	Install for MIL-STD-1553A direct coupling
JP73	BUS0B	1X2 pin 0.1" Header	Install for MIL-STD-1553A direct coupling
JP74	BUS1	1X2 pin 0.1" Header	Install for MIL-STD-1553A direct coupling
JP75	BUS1B	1X2 pin 0.1" Header	Install for MIL-STD-1553A direct coupling
JP76	RAM_BANK	4x2 pin 0.1" Header	Header for configuration of ROM/RAM bank select
JP77	PROM_WR	1X2 pin 0.1" Header	Install to Disable PROM writing
JP78	CAN_TERM0	2x2 pin 0.1" Header	Header for configuration of Termination of CAN0 i/f
JP79	CAN_TERM1	2x2 pin 0.1" Header	Header for configuration of Termination of CAN1 i/f
JP80	I3V3	2 pin 0.1" Header	Measure point for 3.3V current (Link normally installed)
JP81	I1V8	2 pin 0.1" Header	Measure point for 1.8V current (Link normally installed)
JP82	JP_RESET	1X2 pin 0.1" Header	Pins for external RESET switch
JP83	WD_EN	1X2 pin 0.1" Header	Jumper to enable Watchdog to cause board reset
JP84	CLK_CONFIG	1X3 pin 0.1" Header	Connects either X1 to X2 oscillator to Main oscillator
JP85	PROM_EDAC	1X2 pin 0.1" Header	Install to pull pin HIGH to enable PROM EDAC
JP86	JP_BREAK	1X2 pin 0.1" Header	Pins for external BREAK switch
JP87	DLL_BP	1X2 pin 0.1" Header	Install jumper to Bypass internal PLL circuit
JP88	SPW_OSC	1X2 pin 0.1" Header	Connects MAIN_CLK also as SPW_CLK
JP89	FP_LEDS	4x2 pin 0.1" Header	Header to connect to front panel LED's

Table 4-38: List and definition of PCB Jumpers, part 3

(for details refer to schematic, RD 1)

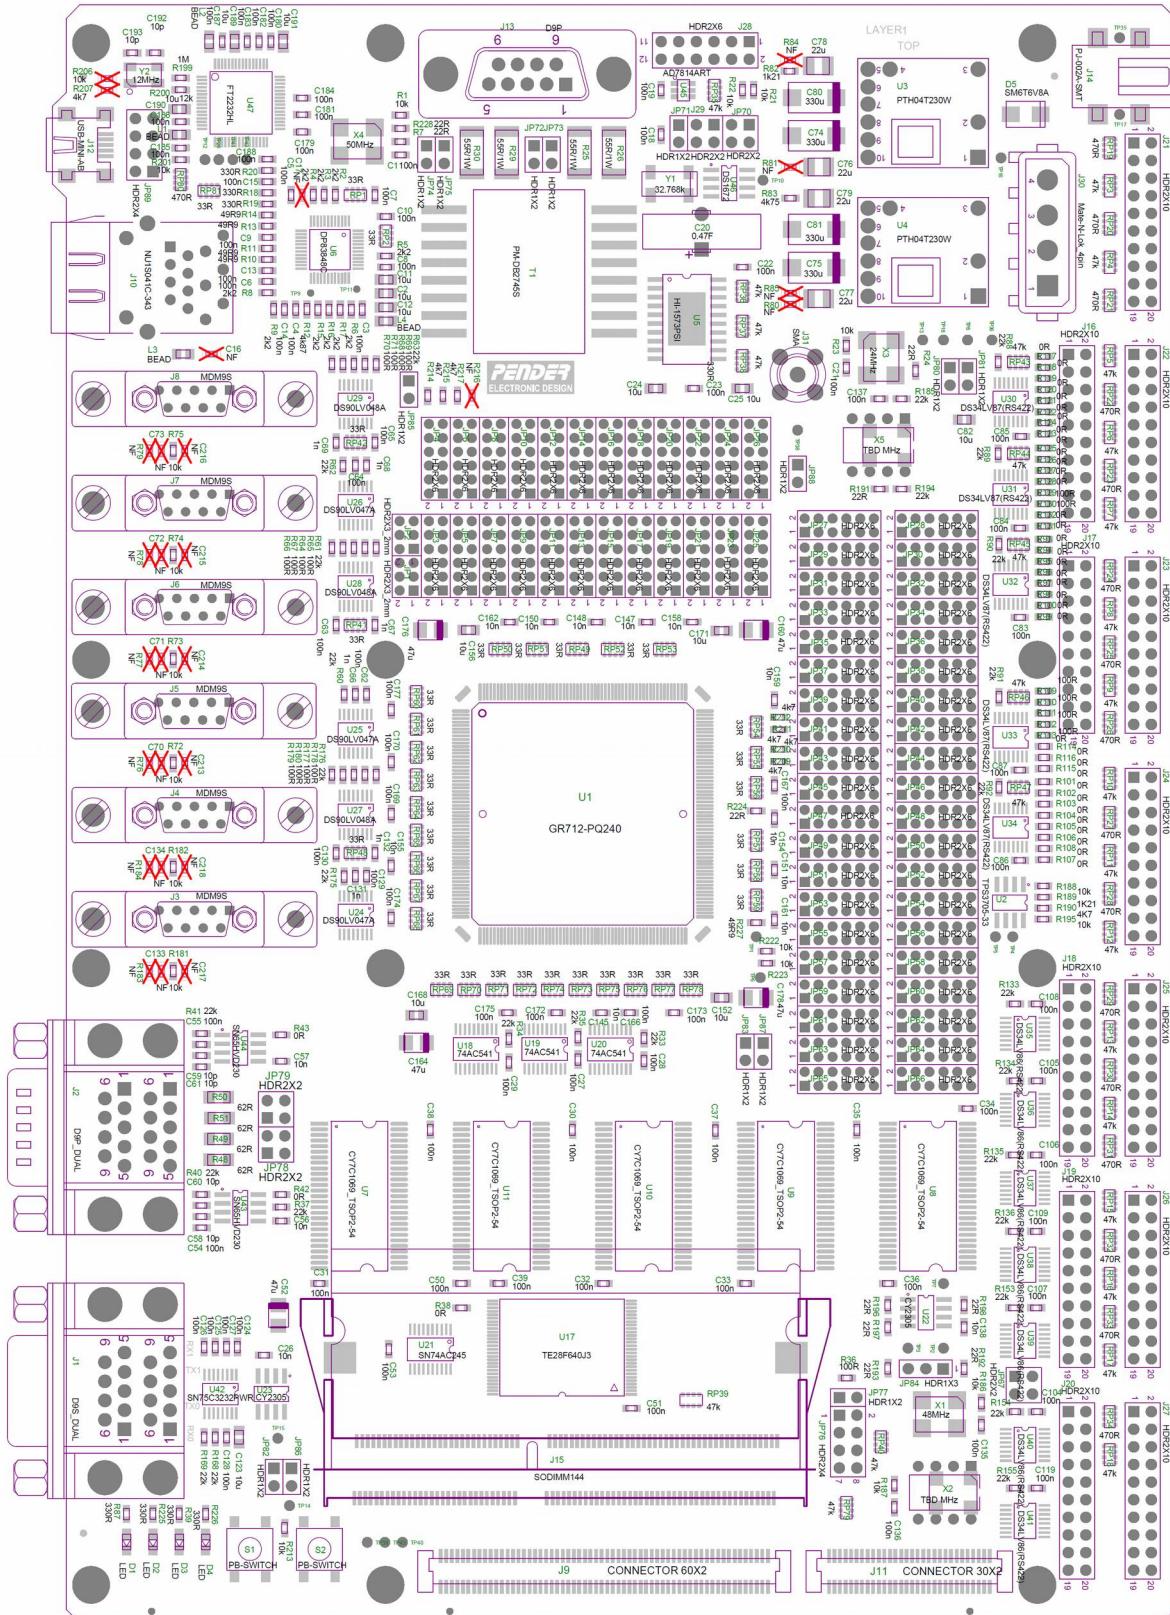


Figure 4-2: PCB Top Assembly View

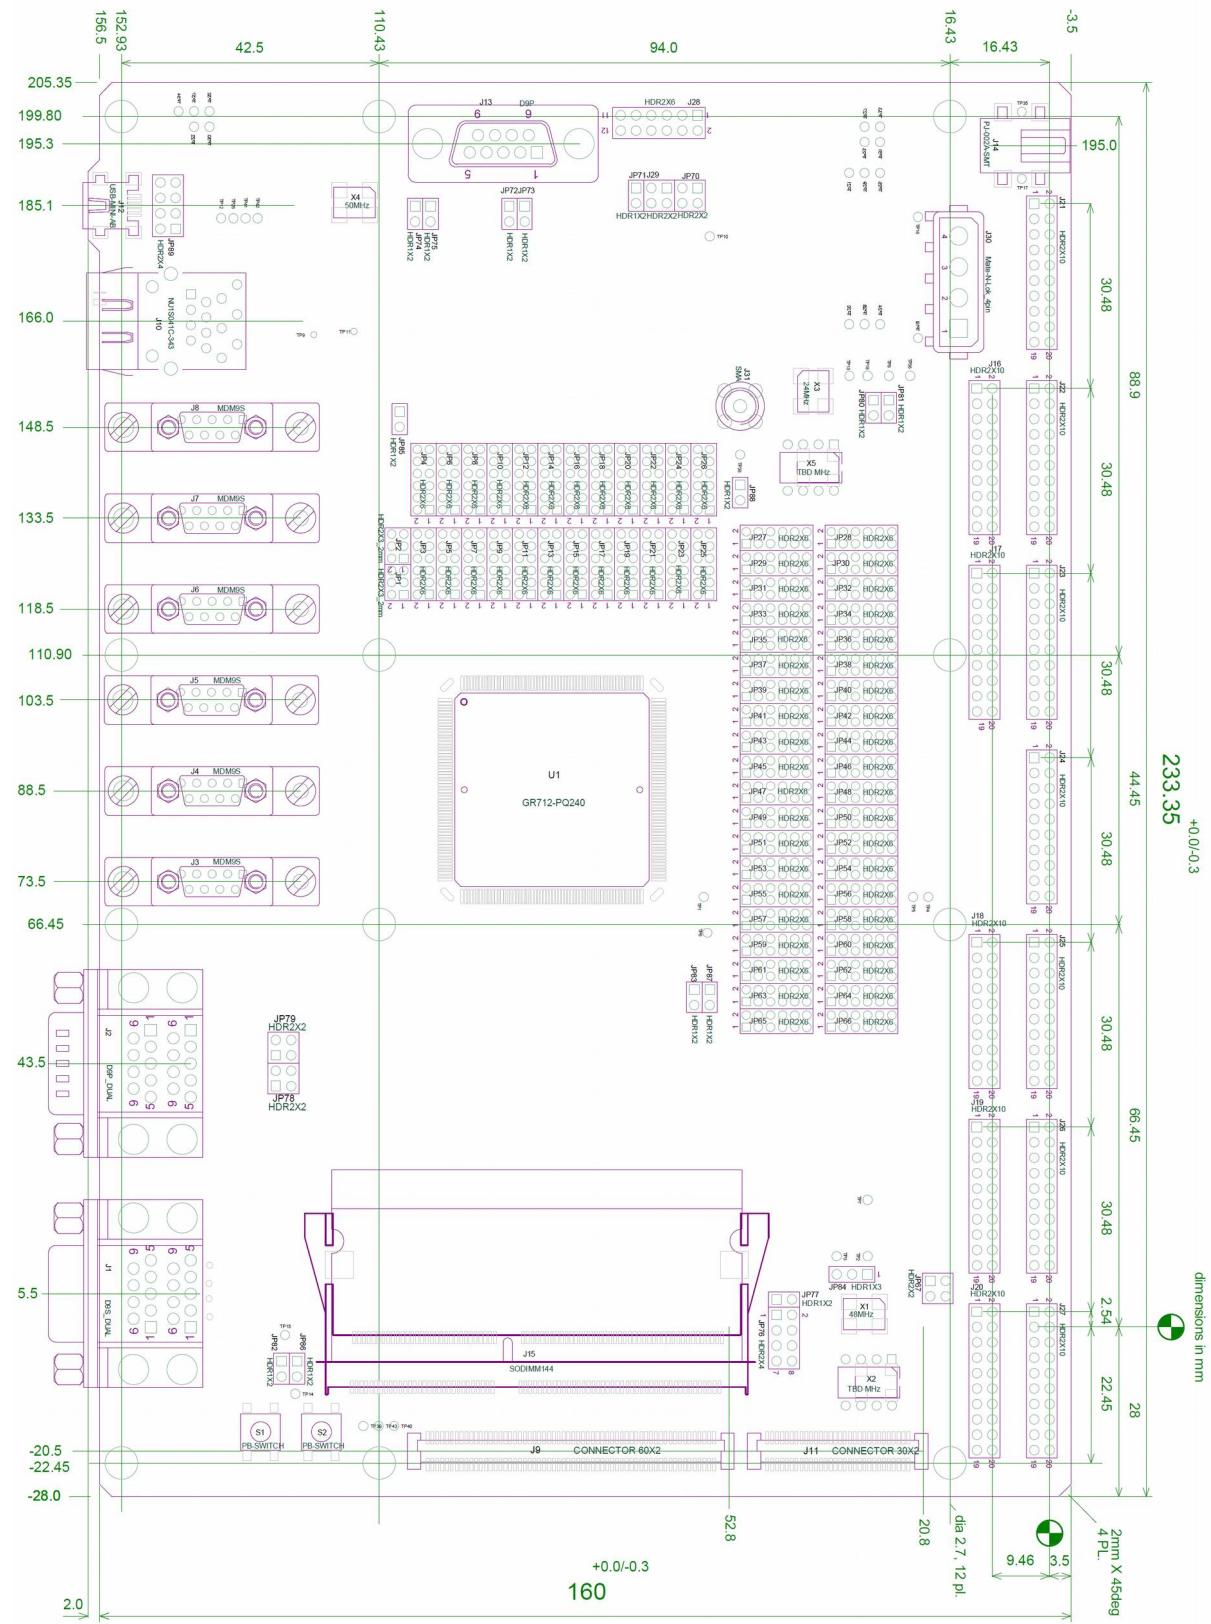


Figure 4-3: PCB Connector Positions

